### **DENON®**

**AVR-X1100W** 

INTEGRATED NETWORK AV RECEIVER

# **Quick Start Guide**

Kurzanleitung / Guide de démarrage rapide / Guida di Avvio Rapido / Guía de inicio rápido / Snelhandleiding / Snabbstartsguide / Краткое руководство пользователя / Skrócona instrukcja obsługi

# Read Me First....

Bitte zuerst lesen... / Lisez-moi en premier.... / Nota preliminare.... / Lea esto primero.... / Lees mij eerst... / Läs detta först... / Прочитайте в первую очередь... / Przeczytaj to najpierw....

**ENGLISH** 

**DEUTSCH** 

FRANÇAIS

**ITALIANO** 

**ESPAÑOL** 

**NEDERLANDS** 

SVENSKA

РУССКИЙ

POLSKI

### Welcome

Thank you for choosing a Denon AV receiver. This guide provides step-by-step instructions for setting up your AV receiver.


Please do not return this unit to the store – call for assistance.

#### If you need help...:


If you need additional help in solving problems, contact Denon customer service in your area. <a href="www.denon.com">www.denon.com</a>

## **Before You Begin**

#### **Required for Setup**

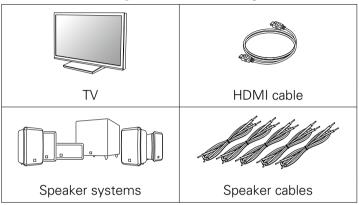

#### **Optional**

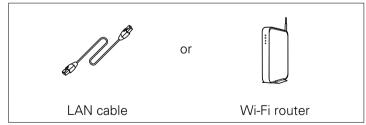



- When connecting this unit to a device that is compatible with the Deep Color, 4K and ARC functions, use an "High Speed HDMI cable with Ethernet" that comes with the HDMI logo.
- These drawings are for illustrative purposes only and may not represent the actual product(s).

#### What's In the Box

Quick Start Guide		FM indoor antenna	
Owner's Manual		AM loop antenna	
Safety Instructions		Sound calibration microphone	<b>\</b>
Notes on radio		Sound calibration microphone stand	
Cable labels		Remote control unit	
Receiver	00	R03/AAA batteries	
Power cord	0,50		




The supplied Sound calibration microphone stand is convenient for use when performing Speaker Calibration. Using your own tripod or the supplied Sound calibration microphone stand enables settings to be automatically configured to the optimum listening environment, providing exceptionally high performance.

## Setup

There are three steps to the setup process.


- 1 Install batteries in the remote control unit
- 2 Connecting the receiver
- 3 Follow the On-Screen Setup Assistant

Installing batteries in the remote control unit

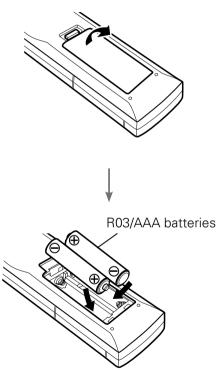

# 2 Connecting the receiver


☐ Place the receiver near your TV and connect the power cable.

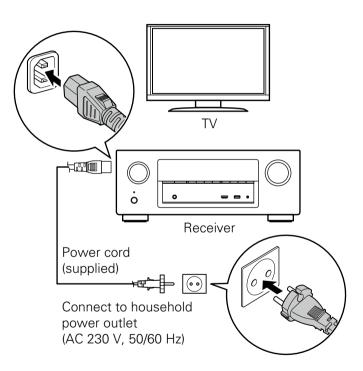

#### ☐ Connect to the network.


#### **Wired LAN**

When connecting cables (wired connection), connect a LAN cable between your receiver and your network router.

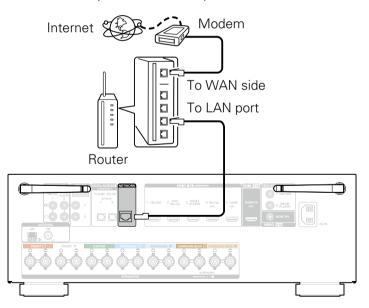


#### Wireless LAN


When using a wireless connection (Wi-Fi), rotate the antennas upword.

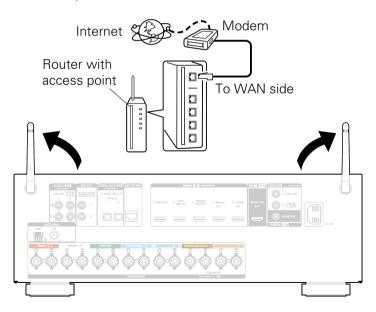

☐ Connect the receiver to your TV with an HDMI cable.

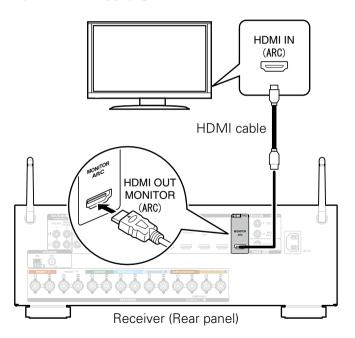


☐ Turn on the TV.

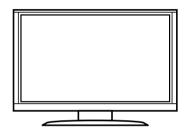




TV remote control unit

☐ Select the appropriate HDMI input on your TV.

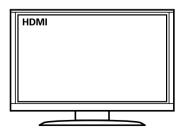


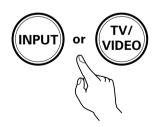

TV remote control unit

#### ☐ Turn on the receiver.

• Press **b** to turn on the receiver.

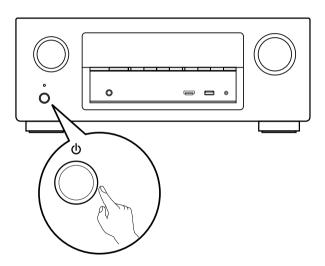

#### □ Verify the connection.

• Verify that you can see this screen on your TV.




When this screen is not displayed, please read operation from the beginning.



### Follow the On-Screen Setup Assistant

The Setup Assistant will walk you through connecting and configuring your speakers and components to your Denon receiver. Please use the remote control and follow the on-screen instructions.



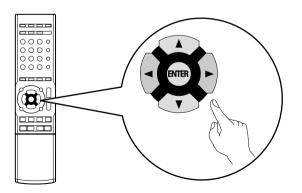

### **Owner's Manual**

Please reference these manuals for more details about the setup and operation of the receiver and it's features.

#### ☐ Web Manual

To read it on your tablet or PC, please access to Web Manual site.

manuals.denon.com/AVRX1100W/EU/EN/





This Web Manual is optimized for tablets and mobile devices.


#### Web Manual



#### □ PDF Manual

To read the owner's manual on your computer or to print it out, please open the included CD-ROM or select the "PDF Download" link from the Web Manual.

Insert the disc into your PC.

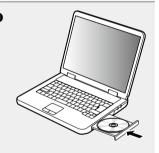

2 Follow the screen or double click on the PDF file.

