

# Denon AVR control protocol

Ver.03

Application model : AVR-X4000

Application terminal: Ethernet  
RS-232C

Rev 10.3.0

Version	Date	Contents	Page
01	12.Mar.'13	Original	
02	25.April.'13	Corrected SIMPLAY command	P10, P33
03	21.May.'13	Corrected Tuner/HD Radio preset channel command TPAN**, TPANMEM**, TPHD**, TPHDMEM** (** is replaced from "A1~G8" to "01~56")	P26, P27 P48, P49

## **Connector specification**

### **I . RS-232C**

Connector type: DB-9pin female type, slave straight connection (DCE type)

( 1pin : GND , 2pin : TxD , 3pin : RxD , 5pin : Common(GND) , 4,6,7,8,9pin : NC )

Communication format:

Synchronous system : Tone step synchronization

Communication system : A half duplex

Communication speed : 9600bps

Character length : 8 bits

Parity control : None

Start bit : 1 bit

Stop bit : 1 bit


Communication procedure : Non procedural

Communication data length : 135 bytes (maximum)


## **II. Ethernet**

Connector type : RJ-45 (10BASE-T/100BASE-TX)

*Example ①*

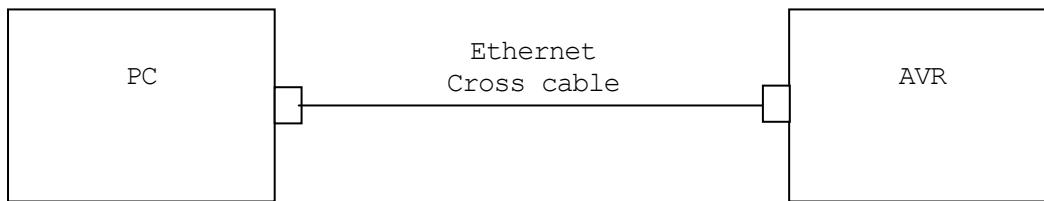

*Example ②*

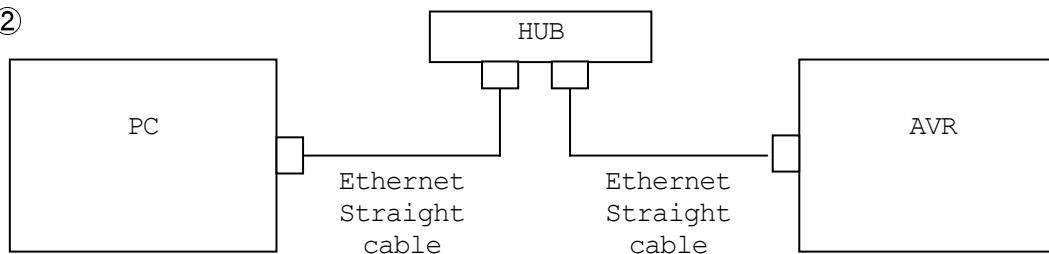

Communication format :

- |                           |                        |
|---------------------------|------------------------|
| Communication system      | : A half duplex        |
| Communication speed       | : 10Mbps/100Mbps       |
| Communication port        | : TCP port 23 (telnet) |
| Communication data length | : 135bytes (maximum)   |

## **NETWORK SETUP of AVR-X4000**

### **>Procedure of Network Setup mode.**

(1) Press SETUP MENU button, then Menu appears on FL-display (and GUI)

(2) Select "Setup Menu > Network > Settings".

(3) Set parameters described below.

<DHCP> "On"---Use this setting when DHCP server is on the local network.

"Off"---Use this setting when DHCP server is not on the local network.

<IP Address> When <DHCP> sets "Off", please set IP address.

When <DHCP> sets "On", you can confirm the IP address that is set by server.

<Subnet Mask> When <DHCP> sets "Off", please set Subnet Mask.

When <DHCP> sets "On", you can confirm the Subnet Mask that is set by server.

<Gateway> Set the address of Gateway when Gateway is on the local network.

Do not set this parameter when Gateway is not on the local network.

<Primary DNS> Do not set this parameter.

<Second DNS> Do not set this parameter.

<Proxy> Set this parameter "Off".

### **<Network Option: IP Control>**

(1) Press SETUP MENU button, then Menu appears on FL-display (and GUI)

(2) Select "Setup Menu > Network > IP Control"

(3) Set parameters described below.

"Always On"---Use this setting when using the AVR-X4000 Connected in a network.

"Off In Standby"--- Use this setting when not using the AVR-X4000 connected in a network.

This setting is reducing the power consumption in the standby mode.

## Protocol specification

The following three data forms are defined.

- COMMAND** : The message sent to a system(AVR) from a controller(Touch Panel etc.)  
A command to a system is given from a controller.
- EVENT** : The message sent to a controller (Touch Panel etc.) from a system (AVR)  
The result is sent, when a system is operated directly and a state changes.  
\*The form of **EVENT** presupposes that it is the same as that of **COMMAND**.  
\*\*Refer to the following table for the contents of **COMMAND** and **EVENT**.
- RESPONSE** : The message sent to a controller (Touch Panel etc.) from a system (AVR)  
if the 'request command' (**COMMAND**?+CR(0x0D)) has came from a controller.  
The **RESPONSE** should be sent within 200ms of receiving the **COMMAND**.  
\*The form of **RESPONSE** presupposes that it is the same as that of **EVENT**.

**Basic specification:** The command by ASCII CODE, parameter expression

\*ASCII CODE which can be used is from 0x20 to 0x7F: the alphabet and the number of 0-9, and space (0x20), some signs,  
AND carriage return (0x0D) --- It is used only as a pause sign.

**Command structure:** COMMAND + PARAMETER + CR (0x0D)

COMMAND: ASCII CODE of 2 characters

- Ex.            SI    : Select Input source  
                MS    : surround Mode Setting  
                MV    : Master Volume setting  
                PW    : system PoWer setting

PARAMETER : ASCII CODE ( up to 25 characters)

- ex.            DVD : function name

SUPER STADIUM : surround mode name

\*Special Parameter--- ? : for request command

**The example of a command**

\* <CR> is the meaning of 0x0D.

SIDVD<CR> : Select Input source DVD

MSSTEREO<CR> : surround Mode Set to STEREO

MVUP<CR> : Master Volume UP

PWON<CR> : system PoWer ON

PWSTANDBY<CR> : system PoWer STANDBY

SI?<CR> : Request command for now playing input source >> Return **RESPONSE** 'SI\*\*\*<CR>'

## Others

- A) **COMMAND** is receivable also during transmission of **EVENT**.
- B) Since CHANNEL VOLUME changes simultaneously when the SURROUND MODE changes, the value of the channel volume of all channels returns as **EVENT**.
- C) CHANNEL VOLUME returns the data of ALL channels by the present SURROUND MODE also including an intact channel. In this case, the data of an intact channel is set to "50".
- D) Since SURROUND MODE changes simultaneously when the INPUT source changes, the SURROUND MODE (and also the value of the channel volume of all channels , It described in B) ) returns as **EVENT**.
- E) When SURROUND MODE is the same in between INPUT source change before and after, **EVENT** of SURROUND MODE and CHANNEL VOLUME does NOT return.
- F) Although **EVENT** of SURROUND MODE returns when the present SURROUND MODE is set up again, CHANNEL VOLUME does NOT return.
- G) When SURROUND MODE is changed, before returning SURROUND MODE after change as **EVENT**, the present SURROUND MODE is returned.
- H) The **RESPONSE** should be sent as opposed to the request command by all the commands with which an **EVENT** exists , not need to the another request commands(ex. SV command).
- I) The **PARAMETER** (with **COMMAND** and **RESPONSE**, **EVENT**) of minimum level of MASTER VOLUME defines "99".
- J) If the MASTER VOLUME & CHANNEL VOLUME set with 0.5dB step, the **PARAMETER** (with **COMMAND** and **RESPONSE**, **EVENT**) defines three ASCII characters as bellows.

Ex.   MASTER VOLUME =   +18.0dB : MV98<CR>  
              |            |  
          +1.0dB : MV81<CR>  
          +0.5dB : MV805<CR>  
          0dB : MV80<CR>  
          -0.5dB : MV795<CR>  
          -1.0dB : MV79<CR>  
              |            |  
          -79.5dB : MV005<CR>  
          --- : MV00<CR>

\* At the \*\*.0dB step, only uses two ASCII characters as **PARAMETER**, same as usual.

- K) 1 seconds later, please transmit the next **COMMAND** after transmitting a power on **COMMAND** (PWON) .

## COMMAND and PARAMETER list

COMMAND	PARAMETER	function	example
PW	ON	POWER ON/STANDBY change	PWON<CR>
	STANDBY		PWSTANDBY<CR>
	?		PW?<CR>
MV	UP	MASTER VOLUME UP/DOWN , direct change to **(**dB)  **:00 to 98 by ASCII , 80=80(0dB) , 00=-0(--dB) (MIN)	MVUP<CR>
	DOWN		MVDOWN<CR>
	**		MV80<CR>
	?		MV?<CR>
CV	FL UP	CHANNEL VOLUME UP/DOWN , direct change to **dB ---FRONT Lch **:38 to 62 by ASCII , 50=0dB  ---FRONT Rch **:38 to 62 by ASCII , 50=0dB  ---CENTERRch **:38 to 62 by ASCII , 50=0dB  ---SUBWOOFER1ch **:38 to 62 by ASCII , 50=0dB,00=OFF  ---SUBWOOFER2ch **:38 to 62 by ASCII , 50=0dB,00=OFF  ---SURROUND Lch **:38 to 62 by ASCII , 50=0dB  ---SURROUND Rch **:38 to 62 by ASCII , 50=0dB  ---SURROUND BACK Lch (SBch 2SP) **:38 to 62 by ASCII , 50=0dB	CVFL UP<CR>
	FL DOWN		CVFL DOWN<CR>
	FL **		CVFL 50<CR>
	FR UP		CVFR UP<CR>
	FR DOWN		CVFR DOWN<CR>
	FR **		CVFR 50<CR>
	C UP		CVC UP<CR>
	C DOWN		CVC DOWN<CR>
	C **		CVC 50<CR>
	SW UP		CVSW UP<CR>
	SW DOWN		CVSW DOWN<CR>
	SW **		CVSW 50<CR>
	SW2 UP		CVSW UP<CR>
	SW2 DOWN		CVSW DOWN<CR>
	SW2 **		CVSW 50<CR>
	SL UP		CVSL UP<CR>
	SL DOWN		CVSL DOWN<CR>
	SL **		CVSL 50<CR>
	SR UP		CVSR UP<CR>
	SR DOWN		CVSR DOWN<CR>
	SR **		CVSR 50<CR>
	SBL UP		CVSBL UP<CR>
	SBL DOWN		CVSBL DOWN<CR>
	SBL **		CVSBL 50<CR>

MV, CV **COMMAND** : "\*" parameter uses two or three ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
CV	SBR UP	---SURROUND BACK Rch (SBch 2SP) **:38 to 62 by ASCII , 50=0dB	CVSBR UP<CR>
	SBR DOWN		CVSBR DOWN<CR>
	SBR **		CVSBR 50<CR>
	SB UP		CVSB UP<CR>
	SB DOWN		CVSB DOWN<CR>
	SB **		CVSB 50<CR>
	FHL UP		CVFHL UP<CR>
	FHL DOWN		CVFHL DOWN<CR>
	FHL **		CVFHL 50<CR>
	FHR UP		CVFHR UP<CR>
	FHR DOWN		CVFHR DOWN<CR>
	FHR **		CVFHR 50<CR>
	FWL UP		CVFWL UP<CR>
	FWL DOWN		CVFWL DOWN<CR>
	FWL **		CVFWL 50<CR>
	FWR UP		CVFWR UP<CR>
	FWR DOWN		CVFWR DOWN<CR>
	FWR **		CVFWR 50<CR>
	?	Return CV Status	CV?<CR>

MV, CV **COMMAND** : "\*" parameter uses two or three ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
MU	ON	VOLUME MUTE ON/OFF change Return MU Status	MUON<CR>
	OFF		MUOFF<CR>
	?		MU?<CR>
SI	PHONO	---HD RADIO (North America model Only) ---FM TUNER (Except North America model) ---Blu-ray ---TV AUDIO ---CBL/SAT ---MEDIA PLAYER ---NETWORK (North America model Only) (North America model Only) (North America & Europe model Only)	SIPHONO<CR>
	CD		SICD<CR>
	HDRADIO		SIHDRADIO<CR>
	TUNER		SITUNER<CR>
	DVD		SIDVD<CR>
	BD		SIBD<CR>
	TV		SITV<CR>
	SAT/CBL		SISAT/CBL<CR>
	MPLAY		<b>SIMPLAY&lt;CR&gt;</b>
	GAME		SIGAME<CR>
	AUX1		SIAUX1<CR>
	AUX2		SIAUX2<CR>
	NET		SINET<CR>
	PANDORA		SIPANDORA<CR>
	SIRIUSXM		SISIRIUSXM<CR>
	SPOTIFY		SISPOTIFY<CR>
	FLICKR		SIFLICKR<CR>
	FAVORITES		SIFAVORITES<CR>
	IRADIO		SIIRADIO<CR>
	SERVER		SISERVER<CR>
	USB/IPOD	Select iPod/USB	SIUSB/IPOD<CR>
	USB	Select INPUT source iPod/USB and USB Start Playback	SIUSB<CR>
	IPD	Select INPUT source iPod/USB and iPod Direct Start Playback	SIIPD<CR>
	IRP	Select INPUT source NETWORK and Internet Radio Start Playback	SIIRP<CR>
	FVP	Select INPUT source NETWORK and Favorites Start Playback	SIFVP<CR>
	?	Return SI Status	SI?<CR>

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
ZM	ON	MAIN ZONE ON/OFF change	ZMON<CR>
	OFF		ZMOFF<CR>
	?	Return ZM Status	ZM?<CR>
	FAVORITE1	FAVORITE STATION 1-3 MODE SELECT	ZMFAVORITE1<CR>
	FAVORITE2		ZMFAVORITE2<CR>
	FAVORITE3		ZMFAVORITE3<CR>
	FAVORITE4		ZMFAVORITE4<CR>
	FAVORITE1 MEMORY	FAVORITE STATION 1-3 MODE MEMORY	ZMFAVORITE1 MEMORY<CR>
	FAVORITE2 MEMORY		ZMFAVORITE2 MEMORY<CR>
	FAVORITE3 MEMORY		ZMFAVORITE3 MEMORY<CR>
	FAVORITE4 MEMORY		ZMFAVORITE4 MEMORY<CR>

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
SD	AUTO	set AUTO mode (Priority:HDMI>>DIGITAL>>ANALOG)	SDAUTO<CR>
	HDMI	set force HDMI INPUT mode	SDHDMI<CR>
	DIGITAL	set force DIGITAL INPUT (Optical,Coaxial)mode	SDDIGITAL<CR>
	ANALOG	set force ANALOG INPUT mode	SDANALOG<CR>
	?	Return SD Status	SD?<CR>
DC	AUTO	set DIGITAL INPUT AUTO mode	DCAUTO<CR>
	PCM	set DIGITAL INPUT force PCM mode	DCPCM<CR>
	DTS	set DIGITAL INPUT force DTS mode	DCDTS<CR>
	?	Return DC Status	DC?<CR>
SV	ON	VIDEO SELECT mode set to ON	SVON<CR>
	OFF	VIDEO SELECT mode cancel	SVOFF<CR>
	DVD	VIDEO SELECT mode set to ON, and select source	SVDVD<CR>
	BD	---Blu-ray	SVBD<CR>
	TV	---TV AUDIO	SVTV<CR>
	SAT/CBL	---CBL/SAT	SVSAT/CBL<CR>
	MPLAY	---MEDIA PLAYER	SVMPPLAY<CR>
	GAME		SVGAME<CR>
	AUX1		SVSAUX1<CR>
	AUX2		SVSAUX2<CR>
	CD		SVCD<CR>
	?	Return SV Status	SV?<CR>
SLP	OFF	MAIN ZONE SLEEP TIMER setting	SLPOFF<CR>
	***	***:001 to 120 by ASCII , 010=10min	SLP120<CR>
	?	Return SLP Status	SLP?<CR>

COMMAND	PARAMETER	function	example
MS	MOVIE	Select SURROUND mode	MSMOVIE<CR>
	MUSIC		MSMUSIC<CR>
	GAME		MSGAME<CR>
	PURE DIRECT		MSPURE DIRECT<CR>
	DIRECT		MSDIRECT<CR>
	STEREO		MSSTEREO<CR>
	STANDARD		MSSTANDARD<CR>
	DOLBY DIGITAL		MSDOLBY DIGITAL<CR>
	DTS SUROUND		MSDTS SURROUND<CR>
	MCH STEREO		MSMCH STEREO<CR>
	ROCK ARENA		MSROCK ARENA<CR>
	JAZZ CLUB		MSJAZZ CLUB<CR>
	MONO MOVIE		MSMONO MOVIE<CR>
	MATRIX		MSMATRIX<CR>
	VIDEO GAME		MSVIDEO GAME<CR>
	VIRTUAL		MSVIRTUAL<CR>
	?	Return MS Status	MS?<CR>
	QUICK1	QUICK SELECT 1-5 MODE SELECT	MSQUICK1<CR>
	QUICK2		MSQUICK2<CR>
	QUICK3		MSQUICK3<CR>
	QUICK4		MSQUICK4<CR>
	QUICK5		MSQUICK5<CR>
	QUICK1 MEMORY	QUICK SELECT 1-5 MODE MEMORY	MSQUICK1 MEMORY<CR>
	QUICK2 MEMORY		MSQUICK2 MEMORY<CR>
	QUICK3 MEMORY		MSQUICK3 MEMORY<CR>
	QUICK4 MEMORY		MSQUICK4 MEMORY<CR>
	QUICK5 MEMORY		MSQUICK5 MEMORY<CR>
	QUICK ?	Return MSQUICK Status	MSQUICK ?<CR>

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
VS	ASPNRM	Set Aspect Ratio to 4:3 mode	VSASPNRM<CR>
	ASPFUL		VSASPFUL<CR>
	ASP ?	Return VSASP Status	VSASP ?<CR>
	SC48P	Set Resolution to 480p/576p	VSSC48P<CR>
	SC10I	Set Resolution to 1080i	VSSC10I<CR>
	SC72P	Set Resolution to 720p	VSSC72P<CR>
	SC10P	Set Resolution to 1080p	VSSC10P<CR>
	SC10P24	Set Resolution to 10P24	VSSC10P24<CR>
	SC4K	Set Resolution to 4K	VSSC4K<CR>
	SCAUTO	Set Resolution to AUTO	VSSCAUTO<CR>
	SC ?	Return VSSC Status	VSSC ?<CR>
	SCH48P	Set Resolution to 480p/576p (HDMI)	VSSCH48P<CR>
	SCH10I	Set Resolution to 1080i(HDMI)	VSSCH10I<CR>
	SCH72P	Set Resolution to 720p(HDMI)	VSSCH72P<CR>
	SCH10P	Set Resolution to 1080p(HDMI)	VSSCH10P<CR>
	SCH10P24	Set Resolution to 10P24 (HDMI)	VSSCH10P24<CR>
	SCH4K	Set Resolution to 4K (HDMI)	VSSCH4K<CR>
	SCHAUTO	Set Resolution to AUTO (HDMI)	VSSCHAUTO<CR>
	SCH ?	Return VSSCH Status (HDMI)	VSSCH ?<CR>
	AUDIO AMP	Set HDMI AUDIO Output to AMP	VSAUDIO AMP<CR>
	AUDIO TV	Set HDMI AUDIO Output to TV	VSAUDIO TV<CR>
	AUDIO ?	Return VSAUDIO Status	VSAUDIO ?<CR>
	VPMAUTO	Set Video Processing Mode to AUTO	VSVPMAUTO<CR>
	VPMGAME	Set Video Processing Mode to GAME	VSVPMGAME<CR>
	VPMMOVI	Set Video Processing Mode to MOVIE	VSVPMMOVI<CR>
	VPM ?	Return VSVPDM Status	VSVPM ?<CR>

COMMAND	PARAMETER	function	example
PS	TONE CTRL OFF	PARAMETER setting	PSTONE CTRL OFF<CR>
	TONE CTRL ON	TONE CONTROL ON/OFF	PSTONE CTRL OFF<CR>
	TONE CTRL ?	Return PSTONE CONTROL Status	PSTONE CTRL ?<CR>
	CINEMA EQ.ON	CINEMA EQ. ON/OFF	PSCINEMA EQ.ON<CR>
	CINEMA EQ.OFF		PSCINEMA EQ.OFF<CR>
	CINEMA EQ. ?	Return PSCINEMA EQ.Status	PSCINEMA EQ. ?<CR>
	MODE: MUSIC	CINEMA / MUSIC / GAME mode change (This parameter can change DOLBY PL2, PL2x, DTS NEO:X mode.)	PSMODE: MUSIC<CR>
	MODE: CINEMA		PSMODE: CINEMA<CR>
	MODE: GAME	---SB=ON : PL2x mode / SB=OFF : PL2 mode --- GAME can change DOLBY PL2 & PL2x & DTS NEO:X mode	PSMODE: GAME<CR>
	MODE: ?	Return PSMODE: Status	PSMODE: ?<CR>
	LOM ON	Loudness Management ON/OFF Control	PSLOM ON<CR>
	LOM OFF		PSLOM OFF<CR>
	LOM ?	Return PSLOM: Status	PSLOM ? <CR>
	PHG LOW	PL IIz HEIGHT GAIN direct change	PSPHG LOW<CR>
	PHG MID		PSPHG MID<CR>
	PHG HI		PSPHG HI<CR>
	PHG ?	Return PSPHG Status	PSPHG ?<CR>
	SP:FH	Speaker Output set(F.Height/F.Wide/S.Back)	PSSP: FH<CR>
	SP:FW		PSSP: FW<CR>
	SP:SB		PSSP: SB<CR>
	SP:HW		PSSP: HW<CR>
	SP:BH		PSSP: BH<CR>
	SP:BW		PSSP: BW<CR>
	SP: ?	Return PSSP: Status	PSSP: ?<CR>

COMMAND	PARAMETER	function	example
PS	MULTEQ:AUDYSSEY	<b>MultEQ XT32</b> mode direct change	PSMULTEQ:AUDYSSEY<CR>
	MULTEQ:BYP.LR		PSMULTEQ:BYP.LR<CR>
	MULTEQ:FLAT		PSMULTEQ:FLAT<CR>
	MULTEQ:MANUAL		PSMULTEQ:MANUAL<CR>
	MULTEQ:OFF		PSMULTEQ:OFF<CR>
	MULTEQ: ?	Return PSMULTEQ: Status	PSMULTEQ: ?<CR>
	DYNEQ ON	Dynamic EQ = ON	PSDYNEQ ON<CR>
	DYNEQ OFF		PSDYNEQ OFF<CR>
	DYNEQ ?	Return PSDYNEQ Status	PSDYNEQ ?<CR>
	REFLEV 0	Reference Level Offset=0dB	PSREFLEV 0<CR>
	REFLEV 5	Reference Level Offset=5dB	PSREFLEV 5<CR>
	REFLEV 10	Reference Level Offset=10dB	PSREFLEV 10<CR>
	REFLEV 15	Reference Level Offset=15dB	PSREFLEV 15<CR>
	REFREV ?	Return PSREFLEV Status	PSREFLEV ?<CR>
	DYNVOL HEV	Dynamic Volume = Heavy	PSDYNVOL HEV<CR>
	DYNVOL MED		PSDYNVOL MED<CR>
	DYNVOL LIT		PSDYNVOL LIT<CR>
	DYNVOL OFF		PSDYNVOL OFF<CR>
	DYNVOL ?	Return PSDYNVOL Status	PSDYNVOL ?<CR>
	LFC ON	<b>Audyssey</b> LFC = ON	PSLFC ON<CR>
	LFC OFF		PSLFC OFF<CR>
	LFC ?	Return PSLFC Status	PSLFC ?<CR>
	CNTAMT UP	Containment Amount UP/DOWN, direct change to ** **:00 to 99 by ASCII , 00=0, ---AVR-X4000 can be operated from 1 to 7 (01 to 07)	PSCNTAMT UP<CR>
	CNTAMT DOWN		PSCNTAMT DOWN<CR>
	CNTAMT **		PSCNTAMT **<CR>
	CNTAMT ?	Return PSCNTAMT Status	PSCNTAMT ?<CR>

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
PS	<b>DSX ONHW</b>	<b>Audyssey DSX ON(Heights &amp; Wides)</b> Audyssey DSX ON(Heights) Audyssey DSX ON(Wides) Audyssey DSX OFF  DSX ?  STW UP STW DOWN STW ** STW ?  STH UP STH DOWN STH ** STH ?	<b>PSDSX ONHW&lt;CR&gt;</b>
	DSX ONH		PSDSX ONH<CR>
	DSX ONW		PSDSX ONW<CR>
	DSX OFF		PSDSX OFF<CR>
	DSX ?		PSDSX ?<CR>
	STW UP		PSSTW UP<CR>
	STW DOWN		PSSTW DOWN<CR>
	STW **		PSSTW 50<CR>
	STW ?		PSSTW ?<CR>
	STH UP		PSSTH UP<CR>
	STH DOWN		PSSTH DOWN<CR>
	STH **		PSSTH 50<CR>
	STH ?		PSSTH ?<CR>

PS **COMMAND** : "\*" parameter uses two or three ASCII characters. (see page6 J) section)

COMMAND	PARAMETER	function	example
PS	BAS UP	BASS UP/DOWN , direct change to **dB **:00 to 99 by ASCII , 50=0dB ---AVR-X4000 can be operated from -6 to +6(44 to 56)	PSBAS UP<CR>
	BAS DOWN		PSBAS DOWN<CR>
	BAS **		PSBAS 50<CR>
	BAS ?		PSBAS ?<CR>
	TRE UP		PSTRE UP<CR>
	TRE DOWN		PSTRE DOWN<CR>
	TRE **		PSTRE 50<CR>
	TRE ?		PSTRE ?<CR>
	DRC AUTO		PSDRC AUTO<CR>
	DRC LOW		PSDRC LOW<CR>
	DRC MID		PSDRC MID<CR>
	DRC HI		PSDRC HI<CR>
	DRC OFF		PSDRC OFF<CR>
	DRC ?		PSDRC ?<CR>
	LFE UP		PSLEE UP<CR>
	LFE DOWN		PSLFE DOWN<CR>
	LFE **		PSLFE 10<CR>
	LFE ?		PSLFE ? <CR>
EFF	EFF UP	EFFECT UP/DOWN , EFFECT LEVEL direct change to **dB **:00 to 99 by ASCII , 00=0dB, 10=-10dB ---AVR-X4000 can be operated from 1 to 15	PSEFF UP<CR>
	EFF DOWN		PSEFF DOWN<CR>
	EFF **		PSEFF 10<CR>
	EFF ?		PSEFF ?<CR>
DEL	DEL UP	DELAY UP/DOWN , direct change to ***dB ***:000 to 999 by ASCII , 000=0ms, 300=300ms ---AVR-X4000 can be operated from 0 to 300	PSDEL UP<CR>
	DEL DOWN		PSDEL DOWN<CR>
	DEL ***		PSDEL ***<CR>
	DEL ?		PSDEL ?<CR>

PS **COMMAND** : "<<" parameter uses two or three ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
PS	PAN ON	PANORAMA ON/OFF	PSPAN ON<CR>
	PAN OFF		PSPAN OFF<CR>
	PAN ?	Return PSPAN Status	PSPAN ?<CR>
	DIM UP	DIMENSION UP/DOWN , direct change to **dB **:00 to 99 by ASCII , 00=0, ---AVR-X4000 can be operated from 0 to 6	PSDIM UP<CR>
	DIM DOWN		PSDIM DOWN<CR>
	DIM **		PSDIM **<CR>
	DIM ?	Return PSDIM Status	PSDIM ?<CR>
	CEN UP	CENTER WIDTH UP/DOWN , direct change to **dB **:00 to 99 by ASCII , 00=0 ---AVR-X4000 can be operated from 0 to 7	PSCEN UP<CR>
	CEN DOWN		PSCEN DOWN<CR>
	CEN **		PSCEN 07<CR>
	CEN ?	Return PSCEN Status	PSCEN ?<CR>
	CEG UP	CENTER GAIN UP/DOWN , direct change to **dB **:00 to 99 by ASCII , 00=0.0 --- AVR-X4000 can be operated from 0.0 to 1.0	PSCEG UP<CR>
	CEG DOWN		PSCEG DOWN<CR>
	CEG **		PSCEG 10<CR>
	CEG ?	Return PSCEG Status	PSCEG ?<CR>
	SWR ON	SW ON/OFF	PSSWR ON<CR>
	SWR OFF		PSSWR OFF<CR>
	SWR ?	Return PSSWR Status	PSSWR ?<CR>
	RSZ S	ROOM SIZE direct change	PSRSZ S<CR>
	RSZ MS		PSRSZ MS<CR>
	RSZ M		PSRSZ M<CR>
	RSZ ML		PSRSZ ML<CR>
	RSZ L		PSRSZ L<CR>
	RSZ ?	Return PSRSZ Status	PSRSZ ?<CR>
	DELAY UP	AUDIO DELAY UP/DOWN , direct change to ***dB ***:000 to 999 by ASCII , 000=0ms, 200=200ms ---AVR-X4000 can be operated from 0 to 200	PSDELAY UP<CR>
	DELAY DOWN		PSDELAY DOWN<CR>
	DELAY ***		PSDELAY 200<CR>
	DELAY ?	Return PSDELAY Status	PSDELAY ?<CR>

PS **COMMAND** : "\*" parameter uses two or three ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
PS	RSTR OFF	AUDIO RESTORER direct change	PSRSTR OFF<CR>
	<b>RSTR LOW</b>		<b>PSRSTR LOW&lt;CR&gt;</b>
	<b>RSTR MED</b>		<b>PSRSTR MED&lt;CR&gt;</b>
	<b>RSTR HI</b>		<b>PSRSTR HI&lt;CR&gt;</b>
	RSTR ?	Return PSRSTR Status	PSRSTR ?<CR>
FRONT	SPA	FRONT SPEAKER direct change	PSFRONT SPA<CR>
	SPB		PSFRONT SPB<CR>
	SPA+B		PSFRONT A+B<CR>
	FRONT?	Return PSFRONT Status	PSFRONT?<CR>

COMMAND	PARAMETER	function	example
PV	OFF	Picture Mode=OFF	PVOFF<CR>
	STD	Picture Mode=STANDARD	PVSTD<CR>
	MOV	Picture Mode=MOVIE	PVMOV<CR>
	VVD	Picture Mode=VIVID	PVVVD<CR>
	STM	Picture Mode=STREAM	PVSTM<CR>
	CTM	Picture Mode=CUSTOM	PVCTM<CR>
	?	Return PV Status	PV?<CR>
	CN UP	CONTRAST UP/DOWN , direct change to **dB **:44 to 56 by ASCII , 50=0 --- AVR-X4000 can be operated from -6 to +6(44 to 56)	PVCN UP<CR>
	CN DOWN		PVCN DOWN<CR>
	CN **		PVCN 50<CR>
	CN ?	Return PVCN Status	PVCN ?<CR>
	BR UP	BRIGHTNESS UP/DOWN , direct change to **dB **:00 to 12 by ASCII , 00=0 --- AVR-X4000 can be operated from 0 to 12	PVBR UP<CR>
	BR DOWN		PVBR DOWN<CR>
	BR **		PVBR 12<CR>
	BR ?	Return PVBR Status	PVBR ?<CR>
	ST UP	Saturation UP/DOWN , direct change to **dB **:44 to 56 by ASCII , 50=0 --- AVR-X4000 can be operated from -6 to +6(44 to 56)	PVST UP<CR>
	ST DOWN		PVST DOWN<CR>
	ST **		PVST 50<CR>
	ST ?	Return PVST Status	PVST ?<CR>
	HUE UP	HUE UP/DOWN , direct change to **dB **:44 to 56 by ASCII , 50=0 --- AVR-X4000 can be operated from -6 to +6(44 to 56)	PVHUE UP<CR>
	HUE DOWN		PVHUE DOWN<CR>
	HUE **		PVHUE 50<CR>
	HUE ?	Return PVHUE Status	PVHUE ?<CR>
	DNR OFF	DNR direct change	PVDNR OFF<CR>
	DNR LOW		PVDNR LOW<CR>
	DNR MID		PVDNR MID<CR>
	DNR HI		PVDNR HI<CR>
	DNR ?	Return PVDNR Status	PVDNR ?<CR>
	ENH UP	ENHANCER UP/DOWN, direct change to **dB **:00 to 12 by ASCII, 00=0 --- AVR-X4000 can be operated from 0 to 12	PVENH UP<CR>
	ENH DOWN		PVENH DOWN<CR>
	ENH **		PVENH 12<CR>
	ENH ?	Return PVENH Status	PVENH ?<CR>

PV **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
Z2	PHONO   USB/IPOD	ZONE2 mode set , and select source ---The name of PARAMETER is the same as that of the time of SI COMMAND.	Z2CD<CR>   Z2USB/IPOD<CR>
	USB	Select ZONE2 source iPod/USB and USB Start Playback	Z2USB<CR>
	IPD	Select ZONE2 source iPod/USB and iPod Direct Start Playback	Z2IPD<CR>
	IRP	Select ZONE2 source NETWORK and Internet Radio Start Playback	Z2IRP<CR>
	FVP	Select ZONE2 source NETWORK and Favorites Start Playback	Z2FVP<CR>
	SOURCE	ZONE2 mode cancel	Z2SOURCE<CR>
	UP	ZONE2 VOLUME UP/DOWN , direct change to **dB **:00 to 98 by ASCII , 80=80(0dB) , 00=-0(--dB) (MIN)	Z2UP<CR>
	DOWN		Z2DOWN<CR>
	**		Z280<CR>
Z2MU	ON	ZONE2 ON/OFF change	Z2ON<CR>
	OFF		Z2OFF<CR>
	?	Return Z2 Status	Z2?<CR>
	ON	ZONE2 OUTPUT MUTE ON/OFF change	Z2MUON<CR>
	OFF		Z2MUFF<CR>
Z2CS	?	Return Z2MU Status	Z2MU?<CR>
	ST	ZONE2 Channel setting	Z2CSST<CR>
	MONO		Z2CSMONO<CR>
	?	Return Z2CS Status	Z2CS?<CR>
Z2CV	FL UP	ZONE2 CHANNEL VOLUME UP/DOWN , direct change to **dB ---FRONT Lch **:38 to 62 by ASCII , 50=0dB	Z2CVFL UP<CR>
	FL DOWN		Z2CVFL DOWN<CR>
	FL **		Z2CVFL 50<CR>
	FR UP	ZONE2 CHANNEL VOLUME UP/DOWN , direct change to **dB ---FRONT Rch **:38 to 62 by ASCII , 50=0dB	Z2CVFR UP<CR>
	FR DOWN		Z2CVFR DOWN<CR>
	FR **		Z2CVFR 50<CR>
	?	Return Z2CV Status	Z2CV?<CR>
Z2HPF	ON	ZONE2 HPF ON/OFF	Z2HPFON<CR>
	OFF		Z2HPFOFF<CR>
	?	Return Z2HPF Status	Z2HPF?<CR>

Z2、Z2CV **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
Z2PS	BAS UP	ZONE2 BASS UP/DOWN , direct change to **dB **:00 to 99 by ASCII , 00=0dB ---AVR-X4000 can be operated from -10 to +10(40 to 60) Return Z2PSBAS Status	Z2PSBAS UP<CR>
	BAS DOWN		Z2PSBAS DOWN<CR>
	BAS **		Z2PSBAS 50<CR>
	BAS ?		Z2PSBAS ?<CR>
	TRE UP		Z2PSTRE UP<CR>
	TRE DOWN		Z2PSTRE DOWN<CR>
	TRE **		Z2PSTRE 50<CR>
	TRE ?		Z2PSTRE ?<CR>
Z2SLP	OFF	ZONE2 SLEEP TIMER setting ***:001 to 120 by ASCII , 010=10min	Z2SLPOFF<CR>
	***		Z2SLP120<CR>
	?		Z2SLP?<CR>
Z2	FAVORITE1	ZONE2 FAVORITE STATION 1-3 MODE SELECT	Z2FAVORITE1<CR>
	FAVORITE2		Z2FAVORITE2<CR>
	FAVORITE3		Z2FAVORITE3<CR>
	FAVORITE4		Z2FAVORITE4<CR>
	FAVORITE1 MEMORY	ZONE2 FAVORITE STATION 1-3 MODE MEMORY	Z2FAVORITE1 MEMORY<CR>
	FAVORITE2 MEMORY		Z2FAVORITE2 MEMORY<CR>
	FAVORITE3 MEMORY		Z2FAVORITE3 MEMORY<CR>
	FAVORITE4 MEMORY		Z2FAVORITE4 MEMORY<CR>
	QUICK1	ZONE2 QUICK SELECT 1-5 MODE SELECT	Z2QUICK1<CR>
	QUICK2		Z2QUICK2<CR>
	QUICK3		Z2QUICK3<CR>
	QUICK4		Z2QUICK4<CR>
	QUICK5		Z2QUICK5<CR>
	QUICK1 MEMORY	ZONE2 QUICK SELECT 1-5 MODE MEMORY	Z2QUICK1 MEMORY<CR>
	QUICK2 MEMORY		Z2QUICK2 MEMORY<CR>
	QUICK3 MEMORY		Z2QUICK3 MEMORY<CR>
	QUICK4 MEMORY		Z2QUICK4 MEMORY<CR>
	QUICK5 MEMORY		Z2QUICK5 MEMORY<CR>
	QUICK ?	Return Z2QUICK Status	Z2QUICK ?<CR>

Z2PS **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J) section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
Z3	PHONO   USB/IPOD	ZONE3 mode set , and select source ---The name of PARAMETER is the same as that of the time of SI COMMAND.	Z3PHONO<CR>   Z3USB/IPOD<CR>
	USB	Select ZONE3 source iPod/USB and USB Start Playback	Z3USB<CR>
	IPD	Select ZONE3 source iPod/USB and iPod Direct Start Playback	Z3IPD<CR>
	IRP	Select ZONE3 source NETWORK and Internet Radio Start Playback	<b>Z3IRP&lt;CR&gt;</b>
	FVP	Select ZONE3 source NETWORK and Favorites Start Playback	<b>Z3FVP&lt;CR&gt;</b>
	SOURCE	ZONE3 mode cancel	Z3SOURCE<CR>
	UP	ZONE3 VOLUME UP/DOWN , direct change to **dB <b>**:00 to 98 by ASCII , 80=80(0dB) , 00=-0(--dB) (MIN)</b>	Z3UP<CR>
	DOWN		Z3DOWN<CR>
	**		Z380<CR>
	ON		Z3ON<CR>
	OFF		Z3OFF<CR>
	?	Return Z3 Status	Z3?<CR>
Z3MU	ON	ZONE3 OUTPUT MUTE ON/OFF change	Z3MUON<CR>
	OFF		Z3MUFF<CR>
	?	Return Z3MU Status	Z3MU?<CR>
Z3CS	ST	ZONE3 Channel setting	Z3CSST<CR>
	MONO		Z3CSMONO<CR>
	?	Return Z3CS Status	Z3CS?<CR>
Z3CV	FL UP	ZONE3 CHANNEL VOLUME UP/DOWN , direct change to **dB ---FRONT Lch <b>**:38 to 62 by ASCII , 50=0dB</b>	Z3CVFL UP<CR>
	FL DOWN		Z3CVFL DOWN<CR>
	FL **		Z3CVFL 50<CR>
	FR UP	ZONE3 CHANNEL VOLUME UP/DOWN , direct change to **dB ---FRONT Rch <b>**:38 to 62 by ASCII , 50=0dB</b>	Z3CVFR UP<CR>
	FR DOWN		Z3CVFR DOWN<CR>
	FR **		Z3CVFR 50<CR>
	?	Return Z3CV Status	Z3CV?<CR>
Z3HPF	ON	ZONE3 HPF ON/OFF	Z3HPFON<CR>
	OFF		Z3HPFOFF<CR>
	?	Return Z3HPF Status	Z3HPF?<CR>

Z3、Z3CV **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J section)

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
Z3PS	BAS UP	ZONE3 BASS UP/DOWN , direct change to **dB **:00 to 99 by ASCII , 00=0dB ---AVR-X4000 can be operated from -10 to +10(40 to 60) Return Z3PSBAS Status	Z3PSBAS UP<CR>
	BAS DOWN		Z3PSBAS DOWN<CR>
	BAS **		Z3PSBAS 50<CR>
	BAS ?		Z3PSBAS ?<CR>
	TRE UP		Z3PSTRE UP<CR>
	TRE DOWN		Z3PSTRE DOWN<CR>
	TRE **		Z3PSTRE 50<CR>
	TRE ?		Z3PSTRE ?<CR>
Z3SLP	OFF	ZONE3 SLEEP TIMER setting ***:001 to 120 by ASCII , 010=10min Return Z3SLP Status	Z3SLPOFF<CR>
	***		Z3SLP120<CR>
	?		Z3SLP?<CR>
Z3	FAVORITE1	ZONE3 FAVORITE STATION 1-4 MODE SELECT	Z3FAVORITE1<CR>
	FAVORITE2		Z3FAVORITE2<CR>
	FAVORITE3		Z3FAVORITE3<CR>
	FAVORITE4		Z3FAVORITE4<CR>
	FAVORITE1 MEMORY	ZONE3 FAVORITE STATION 1-4 MODE MEMORY	Z3FAVORITE1 MEMORY<CR>
	FAVORITE2 MEMORY		Z3FAVORITE2 MEMORY<CR>
	FAVORITE3 MEMORY		Z3FAVORITE3 MEMORY<CR>
	FAVORITE4 MEMORY		Z3FAVORITE4 MEMORY<CR>
	QUICK1	ZONE3 QUICK SELECT 1-5 MODE SELECT	Z3QUICK1<CR>
	QUICK2		Z3QUICK2<CR>
	QUICK3		Z3QUICK3<CR>
	QUICK4		Z3QUICK4<CR>
	QUICK5		Z3QUICK5<CR>
	QUICK1 MEMORY	ZONE3 QUICK SELECT 1-5 MODE MEMORY	Z3QUICK1 MEMORY<CR>
	QUICK2 MEMORY		Z3QUICK2 MEMORY<CR>
	QUICK3 MEMORY		Z3QUICK3 MEMORY<CR>
	QUICK4 MEMORY		Z3QUICK4 MEMORY<CR>
	QUICK5 MEMORY		Z3QUICK5 MEMORY<CR>
	QUICK ?	Return Z3QUICK Status	Z3QUICK ?<CR>

Z3PS **COMMAND** : "\*" parameter uses two ASCII characters. (see page6 J) section)

## ※ ANALOG TUNER Control

COMMAND	PARAMETER	function	example
TF	ANUP	TUNER Frequency UP/DOWN	TFANUP<CR>
	ANDOWN		TFANDOWN<CR>
	AN***** (6 digits)	--- *****.** MHz at FM band (<050000 is FM.)	TFAN008750<CR> (87.50MHz at FM)
	AN?	Return TF Status	TFAN?<CR>
TP	ANUP	TUNER PRESET CH UP/DOWN , direct change to No.**  ** : 01-56 01=CH01,56=CH56	TPANUP<CR>
	ANDOWN		TPANDOWN<CR>
	AN** (PRESET No.)		TPAN01<CR> (PRESET No."01")
	AN?	Return TP Status	TPAN?<CR>
	ANMEM	TUNER PRESET MEMORY	TPANMEM<CR>
	ANMEM**	TUNER PRESET MEMORY, Preset stored at No.**  ** : 01-56 01=CH01,56=CH56	TPANMEM**<CR>
TM	AN?	Return TM Status	TMAN?<CR>
	ANAUTO	---Tuning mode set to AUTO mode	TMANAUTO<CR>
	ANMANUAL	---Tuning mode set to MANUAL mode	TMANMANUAL<CR>

TF, TP, TM **COMMAND** : '\*' parameters can NOT operate when INPUT source isn't TUNER.

## ※ HD RADIO Control (North America model only)

COMMAND	PARAMETER	function	example
TF	HDUP	HD Channel UP/DOWN , direct change --- ****.* kHz at AM band (>050000 is AM.) *****.* MHz at FM band (<050000 is FM.)	TFHDUP<CR>
	HDDOWN		TFHDDOWN<CR>
	HD***** (6 digits)		TFHD10500<CR> (1050.00kHz at AM)
	HDMC*		TFHDMC2<CR>
	(1 digit)		(* : Multi Cast 1-8)
	HD*****MC*		TFHD008750MC5<CR> (87.50kHz at FM)
TP	HD?	Return TFHD Status HD PRESET CH UP/DOWN , direct change to No.** <b>** : 01-56 01=CH01,56=CH56</b>	TFHD?<CR>
	HDUP		TPHDUP<CR>
	HDDOWN		TPHDDOWN<CR>
	HD** (PRESET No.)		<b>TPHD01&lt;CR&gt;</b> <b>(PRESET No. "01")</b>
	HD?		TPHD?<CR>
	HDMEM		TPHDMEM<CR>
TM	HDMEM**	HD Radio PRESET MEMORY, Preset stored at No.** <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPHDMEM**&lt;CR&gt;</b>
	HDAM		TMHDAM<CR>
	HDFM		TMHDFM<CR>
	HD?		TMHD?<CR>
	HDAUTOHD		TMHDAUTOHD<CR>
	HDAUTO		TMHDAUTO<CR>
	HDMANUAL		TMHDMANUAL<CR>
	HDANAAUTO		TMHDANAAUTO<CR>
	HDANAMANU		TMHDANAMANU<CR>
HD	HD?	Return HD Status HD? ---BAND, STATION NAME, MULTI CAST CURRENT, MULTI CAST NUMBER, SIGNAL LEVEL, ARTIST, TITLE, ALBUM, GENRE, PROGRAM TYPE, MODE	TMHD?<CR>
	?		HD?<CR>

## ※Network Audio/USB /iPod DIRECT Extended Control

COMMAND	PARAMETER	function	example
NS	90	"Cursor Up" Control	NS90<CR>
	91	"Cursor Down" Control	NS91<CR>
	92	"Cursor Left" Control	NS92<CR>
	93	"Cursor Right" Control	NS93<CR>
	94	"Enter (Play/Pause)" Control	NS94<CR>
	9A	"Play" Control(iRadio/mServer/USB) "Play/Pause" Control(iPod Direct)	NS9A<CR>
	9B	"Pause" Control "Play/Pause" Control(iPod Direct)	NS9B<CR>
	9C	"Stop" Control	NS9C<CR>
	9D	"Skip Plus" Control	NS9D<CR>
	9E	"Skip Minus" Control	NS9E<CR>
	<b>9F</b>	"Manual Search Plus" Control(USB/iPod)	<b>NS9F&lt;CR&gt;</b>
	<b>9G</b>	"Manual Search Plus" Control(USB/iPod)	<b>NS9G&lt;CR&gt;</b>
	9H	"Repeat One" (USB/iPod DIRECT/mServer/Spotify)	NS9H<CR>
	9I	"Repeat All" (USB/iPod DIRECT/mServer/Spotify)	NS9I<CR>
	9J	"Repeat Off" (USB/iPod DIRECT/mServer/Spotify)	NS9J<CR>
	9K	"Random On/Repeat ALL" (USB/mServer/Spotify) "Shuffle Songs" Control (iPod Direct Only)	NS9K<CR>
	9M	"Random Off" (USB/mServer/Spotify) "Shuffle Off" Control (iPod Direct Only)	NS9M<CR>
	9W	Toggle Switch "Browse Mode/Remote Mode" Control (iPod Direct Only)	NS9W<CR>
	9X	"Page Next" Control	NS9X<CR>
	9Y	"Page Previous" Control	NS9Y<CR>
	<b>9Z</b>	"Manual Search STOP" Control(USB/iPod)	<b>NS9Z&lt;CR&gt;</b>
	<b>RPT</b>	"Repeat(toggle)" (Media Server,USB,iPod Direct,Spotify,AirPlay)	<b>NSRPT&lt;CR&gt;</b>
	<b>RND</b>	"Random(toggle)" (Media Server,USB,iPod Direct,Spotify,AirPlay)	<b>NSRND&lt;CR&gt;</b>

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
NS	A	Return Onscreen Display Information List (ASCII CODE Character)	NSA<CR> (Return NSA0-NSA8, Refer to Page 39)
	E	Request Onscreen Display Information List (UTF-8 CODE Character)	NSE<CR> (Return NSE0-NSE8, Refer to Page 40)
	D*	"Direct Text Search" (iRadio/mServer/USB only)	NSD0<CR> (* : 0-9, A-Z)
	B** (PRESET No.)	<b>Preset Call</b> ** : 00-55 00=CH01,55=CH56	<b>NSB00&lt;CR&gt;</b>
	C** (PRESET No.)	<b>Preset Memory</b> , Preset stored at No.** ** : 00-55 00=CH01,55=CH56	<b>NSC00&lt;CR&gt;</b>
	H	Return Preset Channel 01-56 status (UTF-8)	<b>NSH&lt;CR&gt;</b>

## ※Cursor/Enter/Setup Menu

COMMAND	PARAMETER	function	example
MN	CUP	"Cursor Up" Control	MNCUP<CR>
	CDN	"Cursor Down" Control	MNCDN<CR>
	CLT	"Cursor Left" Control	MNCLT<CR>
	CRT	"Cursor Right" Control	MNCRT<CR>
	ENT	"Enter" Control	MNENT<CR>
	RTN	"RETURN" Control	MNRTN<CR>
	OPT	"OPTION" Control	MNOPT<CR>
	INF	"INFO" Control	MNINF<CR>
	MEN ON	"Setup Menu ON" Control	MNMEN ON<CR>
	MEN OFF	"Setup Menu OFF" Control	MNMEN OFF<CR>
	MEN?	Return MNMEN(Menu) status	MNMEN?<CR>
	PRV ON	"InstaPrevue ON" Control	MNPRV ON<CR>
	PRV OFF	"InstaPrevue OFF" Control	MNPRV OFF<CR>
	PRV?	Return MNPRV(InstaPrevue) status	MNPRV?<CR>
	ZST ON	"All Zone Stereo ON" direct Control	MNZST ON <CR>
	ZST OFF	"All Zone Stereo OFF" direct Control	MNZST OFF<CR>

## ※TRIGGER CONTROL

COMMAND	PARAMETER	function	example
TR	1 ON	Trigger 1 ON/OFF Control	TR1 ON<CR>
	1 OFF		TR1 OFF<CR>
	2 ON	Trigger 2 ON/OFF Control	TR2 ON<CR>
	2 OFF		TR2 OFF<CR>
	?	Return TR status	TR?<CR>

## ※Remote Lock/Panel Lock

<b>COMMAND</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>
SY	REMOTE LOCK ON	REMOTE CONTROL LOCK ON/OFF	SYREMOTE LOCK ON<CR>
	REMOTE LOCK OFF		SYREMOTE LOCK OFF<CR>
	PANEL LOCK ON	PANEL BUTTON (Except MASTER VOL.) CONTROL LOCK ON	SYPANEL LOCK ON<CR>
	PANEL+V LOCK ON	PANEL BUTTON & MASTER VOL. CONTROL LOCK ON	SYPANEL+V LOCK ON<CR>
	PANEL LOCK OFF	PANEL BUTTUM & MASTER VOL. CONTROL LOCK OFF	SYPANEL LOCK OFF<CR>

## ※UPGRADE ID Display

<b>COMMAND</b>	<b>PARAMETER</b>	<b>function</b>	<b>example</b>
UG	IDN	ID Number for UPGRADE is displayed on FL Display	UGIDN<CR>

## EVENT (or RESPONSE) and PARAMETER list

EVENT	PARAMETER	function	example
PW	ON	POWER ON/STANDBY change	PWON<CR>
	STANDBY		PWSTANDBY<CR>
MV	**	MASTER VOLUME change , **:00 to 98 by ASCII 98 = 18dB (MAX) 80 = 00dB 01 = -79dB 005 = -79.5dB 00 = --- (MIN)	MV80<CR>
CV	FL **	CHANNEL VOLUME change , **:00,38 to 62 by ASCII 62 = +12dB (MAX) 50 = 0dB 38 = -12dB (MIN) 00 = OFF (define ONLY SWch in DIRECT mode.)  (at SBch 2SP) (at SBch 2SP) (at SBch 1SP)	CVFL 50<CR>
	FR **		CVFR 50<CR>
	C **		CVC 50<CR>
	SW **		CVSW 50<CR>
	SW2 **		CVSW2 50<CR>
	SL **		CVSL 50<CR>
	SR **		CVSR 50<CR>
	SBL **		CVSBL 50<CR>
	SBR **		CVSBR 50<CR>
	SB **		CVSB 50<CR>
	FHL **		CVFHL 50<CR>
	FHR **		CVFHR 50<CR>
	FWL **		CVFWL 50<CR>
	FWR **		CVFWR 50<CR>
MU	ON	OUTPUT MUTE ON/OFF change	MUON<CR>
	OFF		MUOFF<CR>

The **PARAMETER** of MV, CV **EVENT** : Uses two or three ASCII characters. (see page6 J section)

<b>EVENT</b>	<b>PARAMETER</b>	function	example
SI	PHONO	INPUT source change ---HD RADIO (North America model Only) ---FM TUNER(Except North America model) ---Blu-ray ---TV AUDIO ---CBL/SAT ---MEDIA PLAYER ---NETWORK (North America model Only) (North America model Only) (North America & Europe model Only)	SIPHONO<CR>
	CD		SICD<CR>
	HDRADIO		SIHDRADIO<CR>
	TUNER		SITUNER<CR>
	DVD		SIDVD<CR>
	BD		SIBD<CR>
	TV		SITV<CR>
	SAT/CBL		SISAT/CBL<CR>
	MPLAY		<b>SIMPLAY&lt;CR&gt;</b>
	GAME		SIGAME<CR>
	AUX1		SIAUX1<CR>
	AUX2		SIAUX2<CR>
	NET		SINET<CR>
	PANDORA		SIPANDORA<CR>
	SIRIUSXM		SISIRIUSXM<CR>
	SPOTIFY		SISPOTIFY<CR>
	FLICKR		SIFLICKR<CR>
	FAVORITES		SIFAVORITES<CR>
	IRADIO		SIIRADIO<CR>
	SERVER		SISERVER<CR>
	USB/IPOD	---iPod/USB	SIUSB/IPOD<CR>
	USB DIRECT		SIUSB DIRECT<CR>
	IPOD DIRECT		SIIPOD DIRECT<CR>
	USB		SIUSB<CR>
	IPD		SIIPD<CR>
	IRP		SIIRP<CR>
	FVP		SIFVP<CR>

EVENT	PARAMETER	function	example
ZM	ON	MAIN ZONE ON/OFF change	ZMON<CR>
	OFF		ZMOFF<CR>
	FAVORITE1	FAVORITE STATION 1-3 MODE SELECT	ZMFAVORITE1<CR>
	FAVORITE2		ZMFAVORITE2<CR>
	FAVORITE3		ZMFAVORITE3<CR>
	FAVORITE4		ZMFAVORITE4<CR>
	FAVORITE1 MEMORY	FAVORITE STATION 1-3 MODE MEMORY	ZMFAVORITE1 MEMORY<CR>
	FAVORITE2 MEMORY		ZMFAVORITE2 MEMORY<CR>
	FAVORITE3 MEMORY		ZMFAVORITE3 MEMORY<CR>
	FAVORITE4 MEMORY		ZMFAVORITE4 MEMORY<CR>
SD	AUTO	INPUT mode change ARC playing No Input	SDAUTO<CR>
	HDMI		SDHDMI<CR>
	DIGITAL		SDDIGITAL<CR>
	ANALOG		SDANALOG<CR>
	ARC		SDARC<CR>
	NO		SDNO<CR>
DC	AUTO	DIGITAL INPUT mode change	DCAUTO<CR>
	PCM		DCPCM<CR>
	DTS		DCDTS<CR>
SV	ON	VIDEO SELECT mode set VIDEO SELECT mode cancel VIDEO SELECT mode set to ON, and select source ---Blu-ray ---TV AUDIO ---CBL/SAT ---MEDIA PLAYER	SVON<CR>
	OFF		SVOFF<CR>
	DVD		SVDVD<CR>
	BD		SVBD<CR>
	TV		SVTV<CR>
	SAT/CBL		SVSAT/CBL<CR>
	MPLAY		SVMPLAY<CR>
	GAME		SVGAME<CR>
	AUX1		SVSAUX1<CR>
	AUX2		SVSAUX2<CR>
	CD		SVCD<CR>
SLP	OFF	MAIN ZONE SLEEP TIMER setting change	SLPOFF<CR>
	***		SLP120<CR>

EVENT	PARAMETER	function	example
MS	DIRECT	SURROUND mode change	MSDIRECT<CR>
	PURE DIRECT		MSPURE DIRECT<CR>
	STEREO		MSSTEREO<CR>
	MULTI CH IN		MSMULTI CH IN<CR>
	M CH IN+PL2X C		MSM CH IN+PL2X C<CR>
	M CH IN+PL2X M		MSM CH IN+PL2X M<CR>
	M CH IN+PL2Z H		MSM CH IN+PL2Z H<CR>
	M CH IN +DOLBY EX		MSM CH IN+DOLBY EX<CR>
	MULTI CH IN 7.1		MSMULTI CH IN 7.1<CR>
	<b>M CH IN+NEO:X C</b>		<b>MSM CH IN+NEO:X C&lt;CR&gt;</b>
	<b>M CH IN+NEO:X M</b>		<b>MSM CH IN+NEO:X M&lt;CR&gt;</b>
	<b>M CH IN+NEO:X G</b>		<b>MSM CH IN+NEO:X G&lt;CR&gt;</b>
	DOLBY PL2 C		MSDOLBY PL2 C<CR>
	DOLBY PL2 M		MSDOLBY PL2 M<CR>
	DOLBY PL2 G		MSDOLBY PL2 G<CR>
	DOLBY PL2X C		MSDOLBY PL2X C<CR>
	DOLBY PL2X M		MSDOLBY PL2X M<CR>
	DOLBY PL2X G		MSDOLBY PL2X G<CR>
	DOLBY PL2Z H		MSDOLBY PL2Z H<CR>
	DOLBY DIGITAL		MSDOLBY DIGITAL<CR>
	DOLBY D EX		MSDOLBY D EX<CR>
	DOLBY D+PL2X C		MSDOLBY D+PL2X C<CR>
	DOLBY D+PL2X M		MSDOLBY D+PL2X M<CR>
	DOLBY D+PL2Z H		MSDOLBY D+PL2Z H<CR>
	<b>DOLBY D+NEO:X C</b>		<b>MSDOLBY D+NEO:X C&lt;CR&gt;</b>
	<b>DOLBY D+NEO:X M</b>		<b>MSDOLBY D+NEO:X M&lt;CR&gt;</b>
	<b>DOLBY D+NEO:X G</b>		<b>MSDOLBY D+NEO:X G&lt;CR&gt;</b>

EVENT	PARAMETER	function	example
MS	DTS NEO:X C		<b>MSDTS NEO:X C&lt;CR&gt;</b>
	DTS NEO:X M		<b>MSDTS NEO:X M&lt;CR&gt;</b>
	DTS NEO:X G		<b>MSDTS NEO:X G&lt;CR&gt;</b>
	DTS SURROUND		MSDTS SURROUND<CR>
	DTS ES DSCRT6.1		MSDTS ES DSCRT6.1<CR>
	DTS ES MTRX6.1		MSDTS ES MTRX6.1<CR>
	DTS+PL2X C		MSDTS+PL2X C<CR>
	DTS+PL2X M		MSDTS+PL2X M<CR>
	DTS+PL2Z H		MSDTS+PL2Z H<CR>
	<b>DTS+NEO:X C</b>		<b>MSDTS+NEO:X C&lt;CR&gt;</b>
	<b>DTS+NEO:X M</b>		<b>MSDTS+NEO:X M&lt;CR&gt;</b>
	<b>DTS+NEO:X G</b>		<b>MSDTS+NEO:X G&lt;CR&gt;</b>
	DTS96/24		MSDTS96/24<CR>
	DTS96 ES MTRX		MSDTS96 ES MTRX<CR>
	MCH STEREO		MSMCH STEREO<CR>
	ROCK ARENA		MSROCK ARENA<CR>
	JAZZ CLUB		MSJAZZ CLUB<CR>
	MONO MOVIE		MSMONO MOVIE<CR>
	MATRIX		MSMATRIX<CR>
	VIDEO GAME		MSVIDEO GAME<CR>
	VIRTUAL		MSVIRTUAL<CR>
	DOLBY D+		MSDOLBY D+<CR>
	DOLBY D+ +EX		MSDOLBY D+ +EX<CR>
	DOLBY D+ +PL2X C		MSDOLBY D+ +PL2X C<CR>
	DOLBY D+ +PL2X M		MSDOLBY D+ +PL2X M<CR>
	DOLBY D+ +PL2Z H		MSDOLBY D+ +PL2Z H<CR>
	<b>DOLBY D+ +NEO:X C</b>		<b>MSDOLBY D+ +NEO:X C&lt;CR&gt;</b>
	<b>DOLBY D+ +NEO:X M</b>		<b>MSDOLBY D+ +NEO:X M&lt;CR&gt;</b>
	<b>DOLBY D+ +NEO:X G</b>		<b>MSDOLBY D+ +NEO:X G&lt;CR&gt;</b>

EVENT	PARAMETER	function	example
	DOLBY TRUEHD		MSDOLBY HD<CR>
	DOLBY HD		MSDOLBY HD<CR>
	DOLBY HD+EX		MSDOLBY HD+EX<CR>
	DOLBY HD+PL2X C		MSDOLBY HD+PL2X C<CR>
	DOLBY HD+PL2X M		MSDOLBY HD+PL2X M<CR>
	DOLBY HD+PL2Z H		MSDOLBY HD+PL2Z H<CR>
	<b>DOLBY HD+NEO:X C</b>		<b>MSDOLBY HD+NEO:X C&lt;CR&gt;</b>
	<b>DOLBY HD+NEO:X M</b>		<b>MSDOLBY HD+NEO:X M&lt;CR&gt;</b>
	<b>DOLBY HD+NEO:X G</b>		<b>MSDOLBY HD+NEO:X G&lt;CR&gt;</b>
	DTS HD		MSDTS HD<CR>
	DTS HD MSTR		MSDTS HD MSTR<CR>
	DTS HD+PL2X C		MSDTS HD+PL2X C<CR>
	DTS HD+PL2X M		MSDTS HD+PL2X M<CR>
	DTS HD+PL2Z H		MSDTS HD+PL2Z H<CR>
	<b>DTS HD+NEO:X C</b>		<b>MSDTS HD+NEO:X C&lt;CR&gt;</b>
	<b>DTS HD+NEO:X M</b>		<b>MSDTS HD+NEO:X M&lt;CR&gt;</b>
	<b>DTS HD+NEO:X G</b>		<b>MSDTS HD+NEO:X G&lt;CR&gt;</b>
	DTS ES 8CH DSCRT		MSDTS ES 8CH DSCRT<CR>
	DTS EXPRESS		MSDTS EXPRESS<CR>
	MPEG2 AAC	(JAPAN model Only)	MSMPEG2 AAC<CR>
	AAC+DOLBY EX	(JAPAN model Only)	MSAAC+DOLBY EX<CR>
	AAC+PL2X C	(JAPAN model Only)	MSAAC+PL2X C<CR>
	AAC+PL2X M	(JAPAN model Only)	MSAAC+PL2X M<CR>
	AAC+PL2Z H	(JAPAN model Only)	MSAAC+PL2Z H<CR>
	<b>AAC+NEO:X C</b>	(JAPAN model Only)	<b>MSAAC+NEO:X C&lt;CR&gt;</b>
	<b>AAC+NEO:X M</b>	(JAPAN model Only)	<b>MSAAC+NEO:X M&lt;CR&gt;</b>
	<b>AAC+NEO:X G</b>	(JAPAN model Only)	<b>MSAAC+NEO:X G&lt;CR&gt;</b>
	<b>ALL ZONE STEREO</b>		<b>MSALL ZONE STEREO&lt;CR&gt;</b>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
MS	QUICK1	QUICK SELECT mode change	MSQUICK1<CR>
	QUICK2		MSQUICK2<CR>
	QUICK3		MSQUICK3<CR>
	QUICK4		MSQUICK4<CR>
	QUICK5		MSQUICK5<CR>
	QUICK0	---QUICK 1(or 2, 3, 4, 5) Change QUICK SELECT OFF	MSQUICK0<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
VS	ASPNRM	ASPECT setting change NRM=4:3 , FUL=16:9	VSASPNRM<CR>
	ASPFUL		VSASPFUL<CR>
	SC48P	Resolution(analog) setting change	VSSC48P<CR>
	SC10I		VSSC10I<CR>
	SC72P		VSSC72P<CR>
	SC10P		VSSC10P<CR>
	SC10P24		VSSC10P24<CR>
	SC4K		VSSC4K<CR>
	SCAUTO		VSSCAUTO<CR>
	SCH48P	Resolution (HDMI) setting change	VSSCH48P<CR>
	SCH10I		VSSCH10I<CR>
	SCH72P		VSSCH72P<CR>
	SCH10P		VSSCH10P<CR>
	SCH10P24		VSSCH10P24<CR>
	SCH4K		VSSCH4K<CR>
	SCHAUTO		VSSCHAUTO<CR>
	AUDIO AMP	HDMI AUDIO Output setting change	VSAUDIO AMP<CR>
	AUDIO TV		VSAUDIO TV<CR>
	VPMAUTO	Video Mode setting change	VSVPMAUTO<CR>
	VPMGAME		VSVPGMGAME<CR>
	VPMMOVI		VSVPMMOVI<CR>

EVENT	PARAMETER	function	example
PS	TONE CTRL OFF	TONE CONTROL ON/OFF change	PSTONE CTRL OFF<CR>
	TONE CTRL ON		PSTONE CTRL OFF<CR>
CINEMA EQ.ON	CINEMA EQ.ON	CINEMA EQ. ON/OFF change	PSCINEMA EQ.ON<CR>
	CINEMA EQ.OFF		PSCINEMA EQ.OFF<CR>
MODE:CINEMA	MODE:CINEMA	CINEMA / MUSIC / GAME / HEIGHT mode change	PSMODE:CINEMA<CR>
	MODE:MUSIC		PSMODE:MUSIC<CR>
	MODE:GAME		PSMODE:GAME<CR>
	MODE:HEIGHT		PSMODE:HEIGHT<CR>
LOM ON	LOM ON	Loudness Management ON/OFF change	PSLOM ON<CR>
	LOM OFF		PSLOM OFF<CR>
PHG LOW	PHG LOW	PL II z HEIGHT GAIN change	PSPHG LOW<CR>
	PHG MID		PSPHG MID<CR>
	PHG HI		PSPHG HI<CR>
MULTEQ:AUDYSSEY	MULTEQ:AUDYSSEY	<b>MultEQ XT32</b> mode change	PSMULTEQ: AUDYSSEY<CR>
	MULTEQ:BYP.LR		PSMULTEQ: BYP.LR<CR>
	MULTEQ:FLAT		PSMULTEQ: FLAT<CR>
	MULTEQ:MANUAL		PSMULTEQ: MANUAL<CR>
	MULTEQ:OFF		PSMULTEQ: OFF<CR>
	DYNEQ ON		PSDYNEQ ON<CR>
DYNEQ OFF	DYNEQ OFF		PSDYNEQ OFF<CR>
	REFLEV 0		PSREFLEV 0<CR>
REFLEV 5	REFLEV 5	Reference Level Offset change	PSREFLEV 5<CR>
	REFLEV 10		PSREFLEV 10<CR>
	REFLEV 15		PSREFLEV 15<CR>
	DYNVOL HEV	DYNAMIC VOLUME change	PSDYNVOL HEV<CR>
DYNVOL MED	DYNVOL MED		PSDYNVOL MED<CR>
	DYNVOL LIT		PSDYNVOL LIT<CR>
	DYNVOL OFF		PSDYNVOL OFF<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
PS	<b>LFC ON</b>	<b>Audyssey LFC change</b>	<b>PSLFC ON&lt;CR&gt;</b>
	<b>LFC OFF</b>		<b>PSLFC OFF&lt;CR&gt;</b>
	<b>CNTAMT **</b>	<b>Containment Amount change</b>	<b>PSCNTAMT 07&lt;CR&gt;</b>
	DSX ONHW	<b>Audyssey DSX change</b>	PSDSX ONHW<CR>
	DSX ONH		PSDSX ONH<CR>
	DSX ONW		PSDSX ONW<CR>
	DSX OFF		PSDSX OFF<CR>
	STW **	<b>STAGE WIDTH change</b>	<b>PSSTW 50&lt;CR&gt;</b>
	STH **	<b>STAGE HEIGHT change</b>	<b>PSSTH 50&lt;CR&gt;</b>

EVENT	PARAMETER	function	example
PS	BAS **	BASS change	PSBAS 50<CR>
	TRE **	TREBLE change	PSTRE 50<CR>
	DRC AUTO	Dynamic Compression change When the input signal is Dolby TrueHD	PSDRC AUTO<CR>
	DRC LOW		PSDRC LOW<CR>
	DRC MID		PSDRC MID<CR>
	DRC HI		PSDRC HI<CR>
	DRC OFF		PSDRC OFF<CR>
	LFE **	LFE change	PSLFE 10<CR>
	EFF **	EFFECT LEVEL change	PSEFF 10<CR>
	DEL ***	DELAY change	PSDEL 100<CR>
	PAN ON	PANORAMA ON/OFF change	PSPAN ON<CR>
	PAN OFF		PSPAN OFF<CR>
	DIM **	DIMMENSION change	PSDIM 06<CR>
	CEN **	CENTER WIDTH change	PSCEN 07<CR>
	<b>CEG **</b>	<b>CENTER GAIN change</b>	<b>PSCEG 10&lt;CR&gt;</b>
	SWR ON	SW ON/OFF change	PSSWR ON<CR>
	SWR OFF		PSSWR OFF<CR>
	RSZ S	ROOM SIZE change	PSRSZ S<CR>
	RSZ MS		PSRSZ MS<CR>
	RSZ M		PSRSZ M<CR>
	RSZ ML		PSRSZ ML<CR>
	RSZ L		PSRSZ L<CR>
	DELAY ***	AUDIO DELAY change	PSDELAY 200<CR>
	RSTR OFF	AUDIO RESTORER change	PSRSTR OFF<CR>
	<b>RSTR LOW</b>		<b>PSRSTR LOW&lt;CR&gt;</b>
	<b>RSTR MED</b>		<b>PSRSTR MID&lt;CR&gt;</b>
	<b>RSTR HI</b>		<b>PSRSTR HI&lt;CR&gt;</b>
	FRONT SPA	FRONT SPEAKER direct change	PSFRONT SPA<CR>
	FRONT SPB		PSFRONT SPB<CR>
	FRONT SPA+B		PSFRONT A+B<CR>

PS **COMMAND** : " \*\* " parameter uses two or three ASCII characters. (see page6 J) section)

<b>EVENT</b>	<b>PARAMETER</b>	function	example
PV	<b>OFF</b>	<b>Picture Mode=OFF</b>	<b>PVOFF&lt;CR&gt;</b>
	<b>STD</b>	<b>Picture Mode=STANDARD</b>	<b>PVSTD&lt;CR&gt;</b>
	<b>MOV</b>	<b>Picture Mode=MOVIE</b>	<b>PVMOV&lt;CR&gt;</b>
	<b>VVD</b>	<b>Picture Mode=VIVID</b>	<b>PVVVD&lt;CR&gt;</b>
	<b>STM</b>	<b>Picture Mode=STREAM</b>	<b>PVSTM&lt;CR&gt;</b>
	<b>CTM</b>	<b>Picture Mode=CUSTOM</b>	<b>PVCTM&lt;CR&gt;</b>
	<b>CN **</b>	CONTRAST change	<b>PVCN 50&lt;CR&gt;</b>
	<b>BR **</b>	BRIGHTNESS Change	<b>PVBR 12&lt;CR&gt;</b>
	<b>ST **</b>	Saturation change	<b>PVST 50&lt;CR&gt;</b>
	<b>HUE **</b>	Hue Change	<b>PVHUE 50&lt;CR&gt;</b>
	<b>DNR OFF</b>	DNR change	<b>PVDNR OFF&lt;CR&gt;</b>
	<b>DNR LOW</b>		<b>PVDNR LOW&lt;CR&gt;</b>
	<b>DNR MID</b>		<b>PVDNR MID&lt;CR&gt;</b>
	<b>DNR HI</b>		<b>PVDNR HI&lt;CR&gt;</b>
	<b>ENH **</b>	ENHANCER change	<b>PVENH 12&lt;CR&gt;</b>

EVENT	PARAMETER	function	example
Z2	PHONO   USB DIRECT IPOD DIRECT	ZONE2 source change ---The name of PARAMETER is the same as that of the time of SI COMMAND.	Z2PHONO<CR>   Z2USB DIRECT<CR> Z2IPOD DIRECT<CR>
	SOURCE	ZONE2 mode cancel	Z2SOURCE<CR>
	QUICK1	ZONE2 QUICK SELECT mode change	Z2QUICK1<CR>
	QUICK2		Z2QUICK2<CR>
	QUICK3		Z2QUICK3<CR>
	QUICK4		Z2QUICK4<CR>
	QUICK5		Z2QUICK5<CR>
	QUICK0	---Z2 QUICK SELECT 1(or 2, 3, 4, 5) Change QUICK SELCT OFF	Z2QUICK0<CR>
	FAVORITE1	ZONE2 FAVORITE STATION 1-3 MODE SELECT	ZMFAVORITE1<CR>
	FAVORITE2		ZMFAVORITE2<CR>
	FAVORITE3		ZMFAVORITE3<CR>
	FAVORITE4		ZMFAVORITE4<CR>
	FAVORITE1 MEMORY	ZONE2 FAVORITE STATION 1-3 MODE MEMORY	ZMFAVORITE1 MEMORY<CR>
	FAVORITE2 MEMORY		ZMFAVORITE2 MEMORY<CR>
	FAVORITE3 MEMORY		ZMFAVORITE3 MEMORY<CR>
	FAVORITE4 MEMORY		ZMFAVORITE4 MEMORY<CR>
	**	ZONE2 VOLUME change , **:00 to 98 by ASCII 98 = 18dB (MAX) 80 = 00dB 01 = -79dB 00 = --- (MIN)	Z280<CR>
	ON	ZONE2 ON/OFF change	Z2ON<CR>
	OFF		Z2OFF<CR>
Z2MU	ON	ZONE2 OUTPUT MUTE ON/OFF change	Z2MUON<CR>
	OFF		Z2MUOFF<CR>

The **PARAMETER** of Z2 **EVENT** : Uses two ASCII characters. (see page4 J) section)

<b>EVENT</b>	<b>PARAMETER</b>	function	example
Z2CS	ST	ZONE2 Channel setting	Z2CSST<CR>
	MONO		Z2CSMONO<CR>
Z2CV	FL **	**:38 to 62 by ASCII , 50=0dB	Z2CVFL 50<CR>
	FR **		Z2CVFR 50<CR>
Z2HPF	ON	ZONE2 HPF ON/OFF change	Z2HPFON<CR>
	OFF		Z2HPFOFF<CR>
Z2PS	BAS **	ZONE2 BASS change ZONE2 TEBLE change	Z2PSBAS 50<CR>
	TRE **		Z2PSTRE 50<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
Z3	PHONO   USB DIRECT IPOD DIRECT	ZONE3 source change ---The name of PARAMETER is the same as that of the time of SI COMMAND.	Z3PHONO<CR>   Z3USB DIRECT<CR> Z3IPOD DIRECT<CR>
	SOURCE	ZONE3 mode cancel	Z3SOURCE<CR>
	QUICK1	ZONE3 QUICK SELECT mode change	Z3QUICK1<CR>
	QUICK2		Z3QUICK2<CR>
	QUICK3		Z3QUICK3<CR>
	QUICK4		Z3QUICK4<CR>
	QUICK5		Z3QUICK5<CR>
	QUICK0	---Z3 QUICK SELECT 1(or 2, 3, 4, 5) Change QUICK SELECT OFF	Z3QUICK0<CR>
	FAVORITE1	ZONE3 FAVORITE STATION 1-4 MODE SELECT	Z3FAVORITE1<CR>
	FAVORITE2		Z3FAVORITE2<CR>
	FAVORITE3		Z3FAVORITE3<CR>
	FAVORITE4		Z3FAVORITE4<CR>
	FAVORITE1 MEMORY	ZONE3 FAVORITE STATION 1-4 MODE MEMORY	Z3FAVORITE1 MEMORY<CR>
	FAVORITE2 MEMORY		Z3FAVORITE2 MEMORY<CR>
	FAVORITE3 MEMORY		Z3FAVORITE3 MEMORY<CR>
	FAVORITE4 MEMORY		Z3FAVORITE4 MEMORY<CR>
	**	ZONE3 VOLUME change , **:00 to 98 by ASCII 98 = 18dB (MAX) 80 = 00dB 01 = -79dB 00 = --- (MIN)	Z380<CR>
	ON	ZONE3 ON/OFF change	Z3ON<CR>
	OFF		Z3OFF<CR>
Z3MU	ON	ZONE3 OUTPUT MUTE ON/OFF change	Z3MUON<CR>
	OFF		Z3MUFF<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
Z3CS	ST	ZONE3 Channel setting	Z3CSST<CR>
	MONO		Z3CSMONO<CR>
Z3CV	FL **	**:38 to 62 by ASCII , 50=0dB	Z3CVFL 50<CR>
	FR **		Z3CVFR 50<CR>
Z3HPF	ON	ZONE3 HPF ON/OFF change	Z3HPFON<CR>
	OFF		Z3HPFOFF<CR>
Z3PS	BAS **	ZONE3 BASS change ZONE3 TEBLE change	Z3PSBAS 50<CR>
	TRE **		Z3PSTRE 50<CR>

## ※ANALOG TUNER Control

EVENT	PARAMETER	function	example
TF	AN***** (6 digits)	TUNER Frequency change --- ****.* kHz at AM band *****.* MHz at FM band	TFAN105000<CR> (1050.00kHz at AM)
TP	AN** (PRESET No.)	TUNER PRESET change to No.** <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPAN01&lt;CR&gt;</b> <b>(PRESET No. "01")</b>
	ANOFF	Change Preset Channel select OFF	TPANOFF<CR>
	ANMEM**	TUNER PRESET MEMORY <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPANMEM01&lt;CR&gt;</b>
TM	ANAUTO	---Tuning mode set to AUTO mode	TMANAUTO<CR>
	ANMANUAL	---Tuning mode set to MANUAL mode	TMANMANUAL<CR>

## ※HD RADIO Control (North America model only)

EVENT	PARAMETER	function	example
TF	HD***** (6 digits)	--- *****.** kHz at AM band (>050000 is AM.) *****.** MHz at FM band (<050000 is FM.)	TPHD105000<CR> (1050.00kHz at AM)
	HDMC* (1 digit)	---HD Multi Cast CH change (* : Multi Cast 1-8, Analog 0)	TFHDMC2<CR>
TP	HD** (PRESET No.)	HD RADIO PRESET change to No.** <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPHD01&lt;CR&gt;</b> <b>(PRESET No."01")</b>
	HDOFF	Change Preset Channel select OFF	TPHDOFF<CR>
	HDMEM**	HDRADIO PRESET MEMORY <b>** : 01-56 01=CH01,56=CH56</b>	<b>TPHDMEM01&lt;CR&gt;</b>
TM	HDAM	HD RADIO BAND , MODE change ---Band set to AM	TMHDAM<CR>
	HDFM	---Band set to FM	TMHDFM<CR>
	HDAUTOHD	---Tuning mode set to AUTO-HD mode	TMHDAUTOHD<CR>
	HDAUTO	---Tuning mode set to AUTO mode	TMHDAUTO<CR>
	HDMANUAL	---Tuning mode set to MANUAL mode	TMHDMANUAL<CR>
	HDANAAUTO	---Tuning mode set to ANALOG AUTO mode	TMHDANAAUTO<CR>
	HDANAMANU	---Tuning mode set to ANALOG AUTO MANUAL mode	TMHDANAMANU<CR>
HD	ST NAME(8 digits)	HD STATION NAME change	HDST NAME *****<CR>
	STL NAME (56 digits)	HD STATION LONG NAME change	HDSTL NAME (56 digits)<CR>
	SIG LEV * (1 digit)	HD ANTENNA SIGNAL STATUS change	HDSIG LEV 0<CR> HDSIG LEV 1<CR> HDSIG LEV 2<CR> HDSIG LEV 3<CR> HDSIG LEV 4<CR> HDSIG LEV 5<CR> HDSIG LEV 6<CR>
	MLT CURRCH * (1 digit)	HD MULTI CAST CURRENT CH change	HDMLT CURRCH *<CR>
	MLT CAST CH (1 digits)	HD MULTI CAST CH NUMBER	HDMLT CAST CH *<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
HD	PTY(18 digits)	HD PROGRAM TYPE change	HDPTY (18 digits)<CR>
	ARTIST(40 digits)	HD ARTIST NAME change	HDARTIST (40 digits)<CR>
	TITLE(40 digits)	HD TITLE NAME change	HDTITLE (40 digits)<CR>
	ALBUM(40 digits)	HD ALBUM NAME change	HDALBUM (40 digits)<CR>
	GENRE(23 digits)	HD GANRE change	HDGENRE (23 digits)<CR>
	MODE	HD MODE (ANALOG/DIGITAL)	HD MODE DIGITAL<CR> HD MODE ANALOG<CR>

## ※Network Audio/USB /iPod DIRECT Extended Control

EVENT	PARAMETER	function	example
NSA		Onscreen Display Information is Answered By the NSA Command.	
	0	Display Line1 Information	NSA0***** _?????<CR>
	1	Display Line3 Information	NSA1※***** _?????<CR>
	2	Display Line4 Information	NSA2※***** _?????<CR>
	3	Display Line5 Information	NSA3※***** _?????<CR>
	4	Display Line6 Information	NSA4※***** _?????<CR>
	5	Display Line7 Information	NSA5※***** _?????<CR>
	6	Display Line8 Information	NSA6※***** _?????<CR>
	7	Display Line9 Information	NSA7***** _?????<CR>
8	Display Line10 Information	NSA8***** _????? *:Character Length MAX96byte _:Null ?:Exclusion (The character after Null should be disregarded) ※:Cursor&Playable Information Data(1Byte) Bit1:Playable Music Bit2:Directory Bit4:CURSOR SELECT=1 Bit7:Picture Bit3,5,6,8:Don't Care	
			NSA0Now Playing USB _????<CR> NSA1※Come Away With Me _??<CR> NSA2※Norah Jones _?????????<CR> NSA3※_ ??????????????????????<CR> NSA4※_ ??????????????????????<CR> NSA5※00:11 100% _?????<CR> NSA6※_ ??????????????????????<CR> NSA7 _?????????????????????<CR> NSA8 _?????????????????????<CR>

<b>EVENT</b>	<b>PARAMETER</b>	function	example
NSE		Onscreen Display Information (mServer/iRadio) is Answered By the NSE Command.	
	0	Display Line1 Information	NSE0***** _????? <cr></cr>
	1	Display Line3 Information	NSE1※***** _????? <cr></cr>
	2	Display Line4 Information	NSE2※***** _????? <cr></cr>
	3	Display Line5 Information	NSE3※***** _????? <cr></cr>
	4	Display Line6 Information	NSE4※***** _????? <cr></cr>
	5	Display Line7 Information	NSE5※***** _????? <cr></cr>
	6	Display Line8 Information	NSE6※***** _????? <cr></cr>
	7	Display Line9 Information	NSE7***** _????? <cr></cr>
	8	Display Line10 Information	NSE8***** _????? <cr> *:UTF-8 CODE Character (MAX96byte) _Null ?: Don't Care (The character after Null should be disregarded) ※:Cursor&amp;Playable Information Data (1Byte) Bit1:Playable Music =1 Bit2:Directory Bit4:CURSOR SELECT=1 Bit7:Picture Bit3,5,6,8:Don't Care ***** _????:96byte Fixed </cr>
			<example> NSE0Now Playing USB_???? <cr> NSE1※Come Away With Me_???<cr> NSE2※Norah Jones_?????????<cr> NSE3※_?????????????????????<cr> NSE4※_?????????????????????<cr> NSE5※00:11 100%_?????<cr> NSE6※_?????????????????????<cr> NSE7_?????????????????????<cr> NSE8_?????????????????????<cr> </cr></cr></cr></cr></cr></cr></cr></cr></cr>

<b>COMMAND</b>	<b>PARAMETER</b>	function	example
NS	B** (PRESET No.)	Preset Call ** : 00-55 00=CH01,55=CH56	NSB00<CR>
	C** (PRESET No.)	Preset Memory, Preset stored at No.** ** : 00-55 00=CH01,55=CH56	NSC00<CR>
	H	Return Preset Channel CH1-CH56 status (UTF-8) ** : 00-55 00=CH01,55=CH56	NSH00***** (20 digits)<CR> NSH01***** (20 digits)<CR>   NSH54***** (20 digits)<CR> NSH55***** (20 digits)<CR>

## ※Cursor/Enter/Setup Menu

COMMAND	PARAMETER	function	example
MN	MEN ON	"Setup Menu ON" Control	MNMEN ON<CR>
	MEN OFF	"Setup Menu OFF" Control	MNMEN OFF<CR>
	PRV ON	"InstaPrevue ON" Control	MNPRV ON<CR>
	PRV OFF	"InstaPrevue OFF" Control	MNPRV OFF<CR>
	ZST ON	"All Zone Stereo ON" Control	MNZST ON<CR>
	ZST OFF	"All Zone Stereo OFF" Control	MNZST OFF<CR>

## ※TRIGGER CONTROL

EVENT	PARAMETER	function	example
TR	1 ON	Trigger 1 ON	TR1 ON<CR>
	1 OFF	Trigger 1 OFF	TR1 OFF<CR>
	2 ON	Trigger 2 ON	TR2 ON<CR>
	2 OFF	Trigger 2 OFF	TR2 OFF<CR>

## ※Remote Lock/Panel Lock

EVENT	PARAMETER	function	example
SY	REMOTE LOCK ON	REMOTE CONTROL LOCK ON/OFF	SYREMOTE LOCK ON<CR>
	REMOTE LOCK OFF		SYREMOTE LOCK OFF<CR>
	PANEL LOCK ON	PANEL BUTTON (Except MASTER VOL.) CONTROL LOCK ON	SYPANEL LOCK ON<CR>
	PANEL+V LOCK ON	PANEL BUTTON & MASTER VOL. CONTROL LOCK ON	SYPANEL+V LOCK ON<CR>
	PANEL LOCK OFF	PANEL BUTTUM & MASTER VOL. CONTROL LOCK OFF	SYPANEL LOCK OFF<CR>

## ※UPGRADE ID Display

COMMAND	PARAMETER	function	example
UG	IDN *****:*****	ID Number for UPGRADE is displayed on FL Display *****:12-digit ID Number	UGIDN *****:*****<CR>
	IDN NG	Can't get ID number from DPMS	UGIDN NG<CR>

## Extension COMMAND

- The RC code can be sent from Serial protocol commands

### Protocol specification

**Command structure:** COMMAND + RC FORMAT + RC DATA + CR (0x0D)

COMMAND : ASCII CODE of 2 characters

Ex.            RC    : RC CODE

RC FORMAT : ASCII CODE of 3 characters

Ex.            KSK    : KASEIKYO FORMAT

      SHP    : SHARP FORMAT

RC DATA : ASCII CODE of 7 characters

※For details of the RC CODE , please refer to the IR remote control code list.

#### KASEIKYO FORMAT

##### REMOTE ID SET : 1

No.	K4-1 : MAIN ZONE																				Key Name		
	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45		
RCKSK0410002	1	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	1	0	0	0	1	1	0
RCKSK0410003						1	1	0	0	0	0	0	0	0	0	0	1	0	0	0	1	1	0
RCKSK0410006						0	1	1	0	0	0	0	0	0	0	0	1	0	0	0	1	0	0
RCKSK0410007						1	1	1	0	0	0	0	0	0	0	0	1	0	0	0	1	1	0

#### SHARP FORMAT

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
RCSHP0230032	000001	ENTER	RCSHP0230048	000011	MUTING
RCSHP0230033	100001	POWER ON	RCSHP0230049	100011	MASTER VOLUME UP
RCSHP0230034	010001	POWER OFF	RCSHP0230050	010011	MASTER VOLUME DOWN
RCSHP0230035	110001	DVD	RCSHP0230051	110011	SL LEVEL UP
RCSHP0230036	001001	STANDARD(DOLBY/DTS SURR.)	RCSHP0230052	001011	SL LEVEL DOWN
RCSHP0230037	101001	SURROUND DYNAMIC	RCSHP0230053	101011	CENTRE / CUE UP

**The example of a command**

\* <CR> is the meaning of 0x0D.

RCKSK0410002<CR> : All Power ON by using KASEIKYO FORMAT

RCSHP0230033<CR> : All Power ON by using SHARP FORMAT