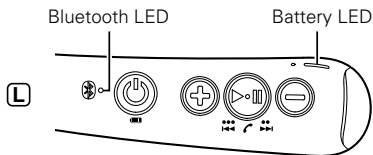 


**DENON<sup>®</sup>**

**AH-C820W**

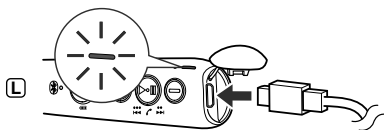


## 1. Charging

Charge this unit using the included USB cable before using.

The battery LED indicates the battery charge status.

- Charging: Lights red
- Charging completed: Lights green



It will take approx. 2 hours from empty to full charge. This unit can be used for approximately 10 hours when the battery is fully charged.

When the rechargeable battery is low, a notification sounds and the battery LED blinks in red at approx. 3 second intervals.


Charge this unit using the supplied USB cable.



- After use, turn this unit off by pressing and holding the power button for 4 seconds or more to keep the battery from draining.

## 2. Pairing with Bluetooth device

Pair this unit with the Bluetooth device you want to connect.

 
 
 
1. Activate Bluetooth function of the Bluetooth device to be connected.
2. With the power off, press and hold this unit's  button for 4 seconds or more. After the Bluetooth LED lights, it blinks in approximately 1 second intervals and this unit enters pairing mode.
3. Select the "DENON AH-C820W" appears on the Bluetooth device to be connected. When connected, the Bluetooth LED on this unit lights for approximately 2.5 seconds.



- If you are requested to enter a PIN code (pass key), enter "0000" (four zeros).

## 3. Playback music

Playback operations can be performed from both the Bluetooth device and this unit. Here we will explain the operations using the control buttons on this unit.

<b>Play/Pause</b>	Press the  button once.	<b>Increase volume</b>	Press the volume "+" button.
<b>Next track</b>	Press the  button twice.	<b>Decrease volume</b>	Press the volume "-" button.
<b>Previous track</b>	Press the  button three times.		

### Web Manual

Refer to the web manual for other functions information and operation procedure details, such as remaining battery indication, audio guidance, and so on.

Enter the following URL into your web browser:

[manuals.denon.com/AHC820W/ALL/EN/](http://manuals.denon.com/AHC820W/ALL/EN/)



## ITALIANO

Fare riferimento al manuale sul web all'indirizzo:  
[manuals.denon.com/AHC820W/ALL/IT/](https://manuals.denon.com/AHC820W/ALL/IT/)



## ESPAÑOL

Consulte el manual web en:  
[manuals.denon.com/AHC820W/ALL/ES/](https://manuals.denon.com/AHC820W/ALL/ES/)



## NEDERLANDS

Raadpleeg de webhandleiding op:  
[manuals.denon.com/AHC820W/ALL/NL/](https://manuals.denon.com/AHC820W/ALL/NL/)



## SVENSKA

Mer information finns i e-bruksanvisningen på:  
[manuals.denon.com/AHC820W/ALL/SV/](https://manuals.denon.com/AHC820W/ALL/SV/)



## РУССКИЙ

См. веб-руководство по адресу:  
[manuals.denon.com/AHC820W/ALL/RU/](http://manuals.denon.com/AHC820W/ALL/RU/)



## POLSKI

Patrz instrukcja internetowa pod adresem:  
[manuals.denon.com/AHC820W/ALL/PL/](http://manuals.denon.com/AHC820W/ALL/PL/)



## 中文简体字

请参考：  
[manuals.denon.com/AHC820W/ALL/ZH/](http://manuals.denon.com/AHC820W/ALL/ZH/)  
中的网络版手册



## 中文繁體字

請參考：  
[manuals.denon.com/AHC820W/ALL/TW/](http://manuals.denon.com/AHC820W/ALL/TW/)  
中的網路版手冊



DENON®

[www.denon.com](http://www.denon.com)

Printed in China 5411 11707 10AD

Copyright © 2018 D&M Holdings Inc. All Rights Reserved.