

RC-1159 KEY CODE (KASEIKYO)

Maker Code (C ₀ C ₁)
DENON (3254H)

Byte 1	Byte 2
00101010	01001100

Key No.	Name	Genre 1(D ₀)	Genre 2(D ₁)	DATA Code (D ₂)	Parity (D _p)
KEY 1					
KEY 2					
KEY 3					
KEY 4	ON / STANDBY	Player (2H)	Network Player (4H)	POWER ON/STANDBY (003H)	14H
KEY 5	FAVORITE	Player (2H)	Network Player (4H)	FAVORITE (03AH)	87H
KEY 6	INTERNET RADIO	Player (2H)	Network Player (4H)	INTERNET RADIO(03EH)	C7H
KEY 7	MUSIC SERVER	Player (2H)	Network Player (4H)	MUSIC SERVER(03CH)	E7H
KEY 8	ONLINE MUSIC	Player (2H)	Network Player (4H)	ONLINE MUSIC(03DH)	F7H
KEY 9	USB / iPod	Player (2H)	Network Player (4H)	USB/iPod(03BH)	97H
KEY 10	TUNER	AMP/TUNER (7)	FM/AM (3H)	BAND(017H)	02H
KEY 11	INTERNET RADIO PRESET 1	Player (2H)	Network Player (4H)	Internet Radio Preset 1(040H)	20H
KEY 12	INTERNET RADIO PRESET 2	Player (2H)	Network Player (4H)	Internet Radio Preset 2(041H)	30H
KEY 13	INTERNET RADIO PRESET 3	Player (2H)	Network Player (4H)	Internet Radio Preset 3(042H)	00H
KEY 14	<<	Player (2H)	Network Player (4H)	<<(00DH)	F4H
KEY 15	PLAY/ PAUSE	Player (2H)	Network Player (4H)	PLAY/ PAUSE(00AH)	84H
KEY 16	>>	Player (2H)	Network Player (4H)	>>(00CH)	E4H
KEY 17	<<	Player (2H)	Network Player (4H)	<<(00FH)	D4H
KEY 18	STOP	Player (2H)	Network Player (4H)	STOP(00BH)	94H
KEY 19	>>	Player (2H)	Network Player (4H)	>>(00EH)	C4H
KEY 20	PRESET +	AMP/TUNER (7)	FM/AM (3H)	▲PRESET (/UP)(016H)	12H
KEY 21	TUNER PRESET	AMP/TUNER (7)	FM/AM (3H)	PRESET(MENU)(03EH)	90H
KEY 22	TUNING ▲	AMP/TUNER (7)	FM/AM (3H)	TUNING UP(019H)	E2H
KEY 23	PRESET -	AMP/TUNER (7)	FM/AM (3H)	▼PRESET (/DOWN)(015H)	22H
KEY 24	PARTY MODE	Player (2H)	Network Player (4H)	PARTY MODE(044H)	60H
KEY 25	TUNING ▼	AMP/TUNER (7)	FM/AM (3H)	TUNING DOWN(01AH)	D2H
KEY 26	MENU	Player (2H)	Network Player (4H)	MENU(036H)	47H
KEY 27	MODE	Player (2H)	Network Player (4H)	MODE(037H)	57H
KEY 28	UP	Player (2H)	Network Player (4H)	UP(020H)	26H
KEY 29	LEFT	Player (2H)	Network Player (4H)	LEFT(022H)	06H
KEY 30	ENTER	Player (2H)	Network Player (4H)	ENTER/決定(024H)	66H
KEY 31	RIGHT	Player (2H)	Network Player (4H)	RIGHT(023H)	16H
KEY 32	DOWN	Player (2H)	Network Player (4H)	DOWN(021H)	36H
KEY 33	SEARCH	Player (2H)	Network Player (4H)	SEARCH(038H)	A7H
KEY 34	HOME	Player (2H)	Network Player (4H)	HOME(035H)	77H
KEY 35	1 /	Player (2H)	Network Player (4H)	1(011H)	35H
KEY 36	2 ABC	Player (2H)	Network Player (4H)	2(/ABC)(012H)	05H
KEY 37	3 DEF	Player (2H)	Network Player (4H)	3(/DEF)(013H)	15H
KEY 38	4 GHI	Player (2H)	Network Player (4H)	4(/GHI)(014H)	65H
KEY 39	5 JKL	Player (2H)	Network Player (4H)	5(/JKL)(015H)	75H
KEY 40	6 MNO	Player (2H)	Network Player (4H)	6(/MNO)(016H)	45H
KEY 41	7 PQRS	Player (2H)	Network Player (4H)	7(/RQRS)(017H)	55H
KEY 42	8 TUV	Player (2H)	Network Player (4H)	8(/TUV)(018H)	A5H
KEY 43	9 WXYZ	Player (2H)	Network Player (4H)	9(/WXYZ)(019H)	B5H
KEY 44	+10	Player (2H)	Network Player (4H)	+10(01CH)	E5H
KEY 45	0 (スペース)*	Player (2H)	Network Player (4H)	0(01BH)	95H
KEY 46	CLEAR	Player (2H)	Network Player (4H)	CLEAR(02FH)	D6H
KEY 47	RANDOM	Player (2H)	Network Player (4H)	RANDOM(02AH)	86H
KEY 48	REPEAT	Player (2H)	Network Player (4H)	REPEAT(02BH)	96H
KEY 49	DIMMER	Player (2H)	Network Player (4H)	DIMMER(033H)	17H
KEY 50	DISPLAY	Player (2H)	Network Player (4H)	DISPLAY(/TIME)(032H)	07H

Byte 3	Byte 4	Byte 5	Byte 6
00000100	00101100	00000000	00101000
00000100	00100101	11000000	11100001
00000100	00100111	11000000	11100011
00000100	00100011	11000000	11100111
00000100	00101011	11000000	11101111
00000100	00101101	11000000	11101001
00001110	11001110	10000000	01000000
00000100	00100000	00100000	00000100
00000100	00101000	00100000	00001100
00000100	00100100	00100000	00000000
00000100	00101011	00000000	00101111
00000100	00100101	00000000	00100001
00000100	00100011	00000000	00100111
00000100	00101111	00000000	00101011
00000100	00101101	00000000	00101001
00000100	00100111	00000000	00100011
00001110	11000110	10000000	01001000
00001110	11000111	11000000	00001001
00001110	11001001	10000000	01000111
00001110	11001010	10000000	01000100
00000100	00100010	00100000	00000110
00001110	11000101	10000000	01001011
00000100	00100110	11000000	11100010
00000100	00101110	11000000	11101010
00000100	00101100	01000000	01101000
00000100	00101000	01000000	01101100
00000100	00100001	11000000	11100101
00000100	00101010	11000000	11101110
00000100	00101000	10000000	10101100
00000100	00100100	10000000	10100000
00000100	00101100	10000000	10101000
00000100	00100010	10000000	10100110
00000100	00101010	10000000	10101110
00000100	00100001	10000000	10100101
00000100	00101001	10000000	10101101
00000100	00100011	10000000	10100111
00000100	00101101	10000000	10101001
00000100	00101111	01000000	01101011
00000100	00100101	01000000	01100001
00000100	00101101	01000000	01101001
00000100	00101100	11000000	11101000
00000100	00100100	11000000	11100000

Extended Code					
-	POWER ON	Player (2H)	Network Player (4H)	POWER ON(001H)	34H
-	POWER OFF	Player (2H)	Network Player (4H)	POWER OFF(002H)	04H
-	PLAY	Player (2H)	Network Player (4H)	PLAY(008H)	A4H
-	PAUSE	Player (2H)	Network Player (4H)	PAUSE(009H)	B4H
-	(source) FM	Player (2H)	Network Player (4H)	FM(049H)	B0H
-	(source) AM	Player (2H)	Network Player (4H)	AM(04AH)	80H
-	(source) RHAPSODY	Player (2H)	Network Player (4H)	RHAPSODY(045H)	70H
-	(source) NAPSTER	Player (2H)	Network Player (4H)	NAPSTER(046H)	40H
-	(source) PANDORA	Player (2H)	Network Player (4H)	PANDORA(047H)	50H
-	(source) LAST.FM	Player (2H)	Network Player (4H)	LAST.FM(048H)	A0H

00000100	00101000	00000000	00101100
00000100	00100100	00000000	00100000
00000100	00100001	00000000	00100101
00000100	00101001	00000000	00101101
00000100	00101001	00100000	00001101
00000100	00100101	00100000	00000001
00000100	00101010	00100000	00001110
00000100	00100110	00100000	00000010
00000100	00101110	00100000	00001010
00000100	00100001	00100000	00000101