

DENON®

# Quick Start Guide

COMPACT DISC PLAYER

DCD-100

 
**Start Here**  
**Starten Sie hier**  
**Commencez ici**  
**Iniziare qui**  
**Iniciar aquí**  
**Begin hier**  
**Starta här**  
**Начните здесь**  
**Zacznij tutaj**



# Before you begin

## What's in the box


---



DCD-100



 Power cord




Remote and batteries




Coaxial digital cable

## Required for setup

 ---



Amplifier

 

Speaker systems




Speaker cables

- For more information, visit [www.denon.com](http://www.denon.com)
- Refer to the online manual for other functions information and operation procedure details.  
[manuals.denon.com/DCD100/EU/EN/](http://manuals.denon.com/DCD100/EU/EN/)




# 1. Connection


- 1 Connect the coaxial audio cable from the DCD-100 to your amplifier.

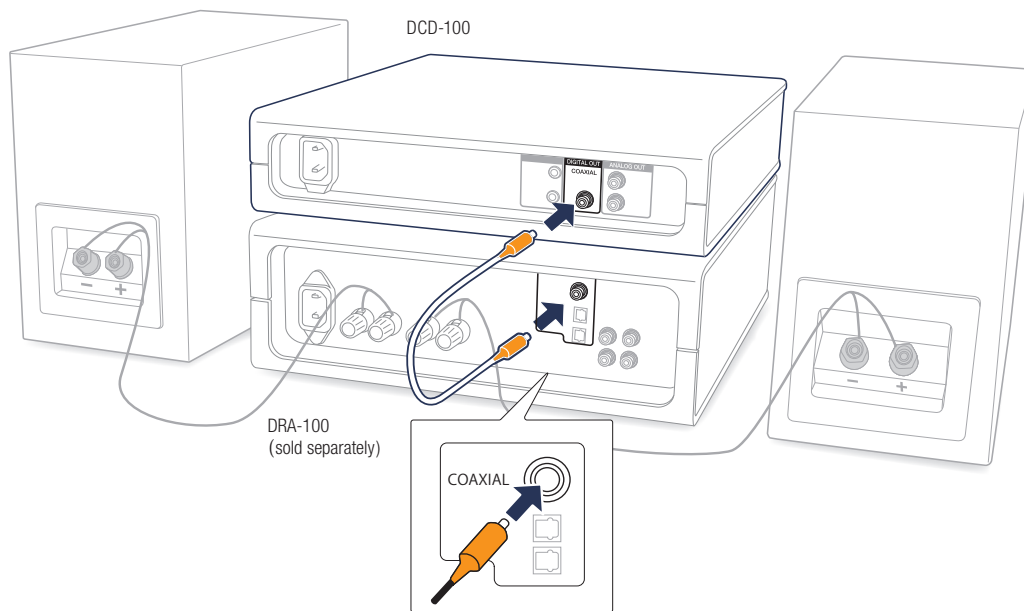

**2** Connect the power cord from the DCD-100 to a power outlet.

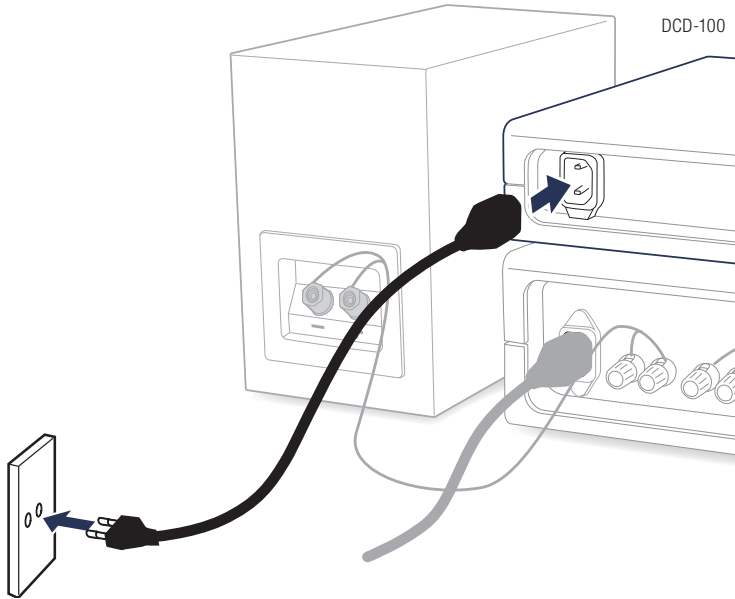


**3** Insert the batteries into the remote.

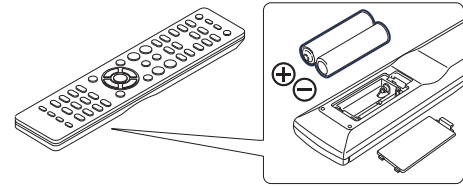


## 2. Enjoying music from your disc


**1** Turn the CD player's power on.

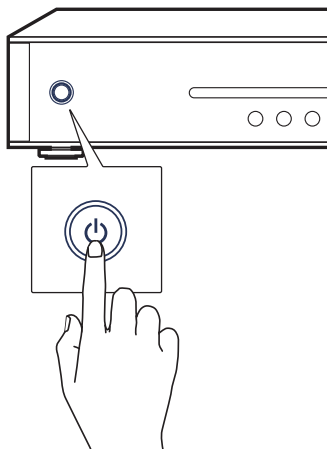

**2** Insert a disc.

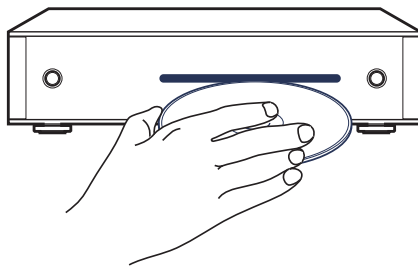

**3** Press the Play button to start playback.

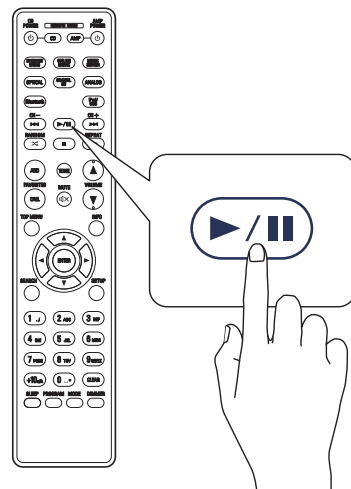

**DENON**

**denon.com**

Printed in China 5411 11542 00AD  
Copyright © 2017 D&M Holdings Inc. All Rights Reserved.