

Read me first

Quick start guide

DENON[®]

DCD-A110





 



110
Anniversary

Welcome




Thank you for choosing a Denon CD player.
This guide provides step-by-step instructions for setting up your CD player.


Before You Begin

What's In the Box

Quick Start Guide		Power cord	
Safety Instructions		Remote control unit (RC-1237)	
Cautions on Using Batteries		R03/AAA batteries	
CD player		Audio cable	

Required for Setup

		
Amplifier	Speaker systems	Speaker cables

 These drawings are for illustrative purposes only and may not represent the actual product(s).


Setup

There are five steps to the setup process.

- 1** Install batteries in the remote control unit
- 2** Connect DCD-A110 to the amplifier
- 3** Plug the power cord into a power outlet
- 4** Turn the DCD-A110's power on
- 5** Begin CD or Super Audio CD playback


1

Install batteries in the remote control unit

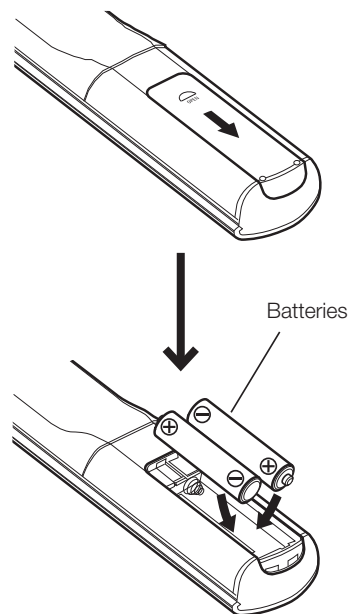


2


Connect DCD-A110 to the amplifier

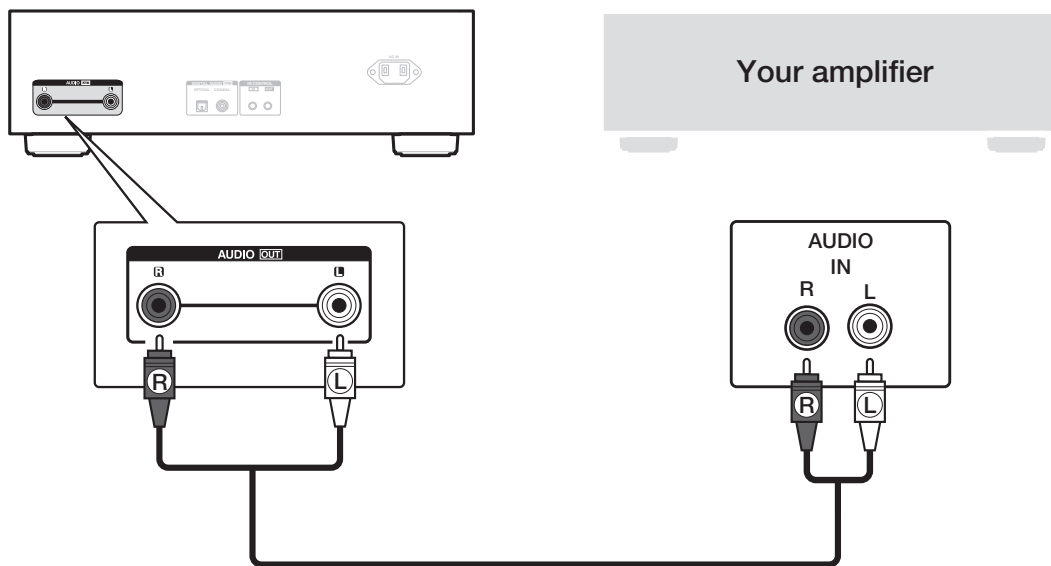

3 Plug the power cord into a power outlet

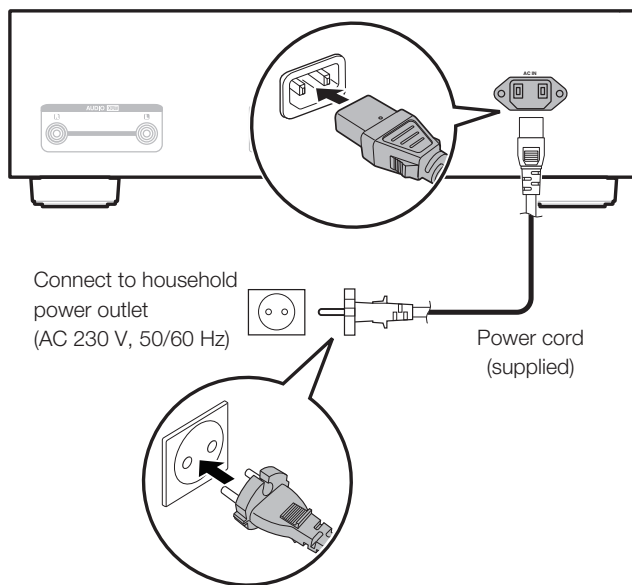


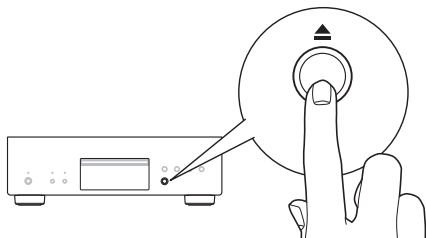
4 Turn the DCD-A110's power on

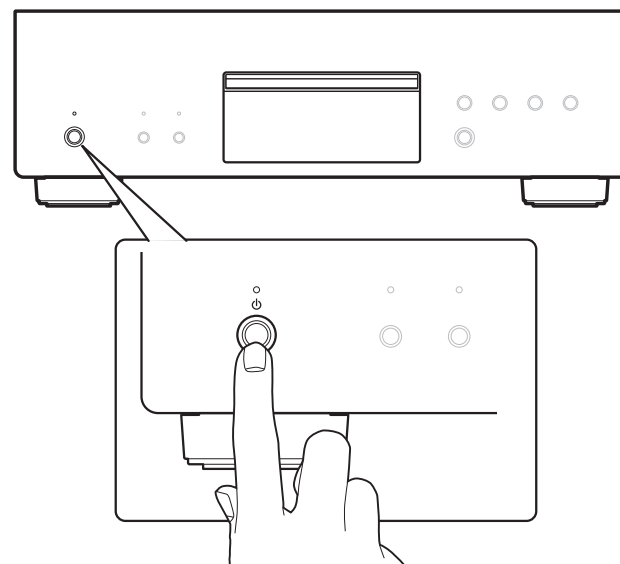


5

Begin CD or Super Audio CD playback


- 1 Press  to open the disc tray.



- 2 Place CD in the disc tray.

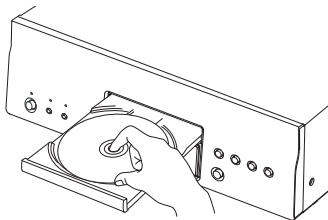

- 3 Press  .
Playback starts.

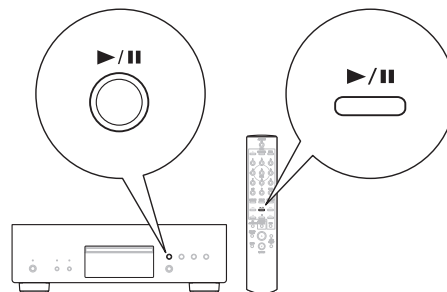


Owner's manual

- Refer to the Online Manual for other functions information and operation procedure details.

manuals.denon.com/DCDA110/EU/EN/



Online Manual

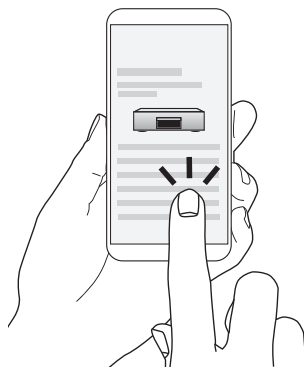

- For more information, visit **www.denon.com**

DENON®

www.denon.com

Printed in Japan 5411 11857 00AD
© 2020 Sound United. All Rights Reserved.