

DENON AVR-3803 RC CODE

FORMAT SHARP

DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED,1=INVERTED

SYSTEM ADDRESS(C1~C5) : 0 1 0 0 0 , EXTENSION BIT(C12,C13) : 1 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
0	0 0 0 0 0 0		16	0 0 0 0 1 0	FR LEVEL DOWN
1	1 0 0 0 0 0	POWER	17	1 0 0 0 1 0	
2	0 1 0 0 0 0	FL LEVEL UP	18	0 1 0 0 1 0	CDR/TAPE
3	1 1 0 0 0 0	PHONO	19	1 1 0 0 1 0	TAPE-2
4	0 0 1 0 0 0	CD	20	0 0 1 0 1 0	
5	1 0 1 0 0 0	TUNER	21	1 0 1 0 1 0	CINEMA EQ ON
6	0 1 1 0 0 0		22	0 1 1 0 1 0	SR LEVEL UP
7	1 1 1 0 0 0	FL LEVEL DOWN	23	1 1 1 0 1 0	SR LEVEL DOWN
8	0 0 0 1 0 0	DBS	24	0 0 0 1 1 0	VIDEO SELECT
9	1 0 0 1 0 0	TV	25	1 0 0 1 1 0	CINEMA EQ OFF
10	0 1 0 1 0 0	VDP	26	0 1 0 1 1 0	
11	1 1 0 1 0 0	FR LEVEL UP	27	1 1 0 1 1 0	MULTI
12	0 0 1 1 0 0	V.AUX	28	0 0 1 1 1 0	INPUT MODE ANALOG
13	1 0 1 1 0 0	VCR-1	29	1 0 1 1 1 0	CURSOR RIGHT
14	0 1 1 1 0 0	VCR-2	30	0 1 1 1 1 0	STATUS
15	1 1 1 1 0 0	VCR-3	31	1 1 1 1 1 0	ON SCREEN

SYSTEM ADDRESS(C1~C5) : 0 1 0 0 0 , EXTENSION BIT(C12,C13) : 1 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
32	0 0 0 0 0 1	ENTER	48	0 0 0 0 1 1	MUTING
33	1 0 0 0 0 1	POWER ON	49	1 0 0 0 1 1	MASTER VOLUME UP
34	0 1 0 0 0 1	POWER OFF	50	0 1 0 0 1 1	MASTER VOLUME DOWN
35	1 1 0 0 0 1	DVD	51	1 1 0 0 1 1	SL LEVEL UP
36	0 0 1 0 0 1	DOLBY / DTS SURROUND	52	0 0 1 0 1 1	SL LEVEL DOWN
37	1 0 1 0 0 1	SW LEVEL DOWN	53	1 0 1 0 1 1	CENTER LEVEL UP
38	0 1 1 0 0 1	DSP SIMULATION	54	0 1 1 0 1 1	CENTER LEVEL DOWN
39	1 1 1 0 0 1	SB/SBL LEVEL UP	55	1 1 1 0 1 1	SBR LEVEL UP
40	0 0 0 1 0 1		56	0 0 0 1 1 1	SBR LEVEL DOWN
41	1 0 0 1 0 1		57	1 0 0 1 1 1	TONE DEFEAT ON
42	0 1 0 1 0 1	TEST TONE	58	0 1 0 1 1 1	TONE DEFEAT OFF
43	1 1 0 1 0 1	SB/SBL LEVEL DOWN	59	1 1 0 1 1 1	SB:MATRIX ON
44	0 0 1 1 0 1	SW LEVEL UP	60	0 0 1 1 1 1	SB:NON MATRIX
45	1 0 1 1 0 1	SPEAKER	61	1 0 1 1 1 1	SB:OFF
46	0 1 1 1 0 1		62	0 1 1 1 1 1	
47	1 1 1 1 0 1		63	1 1 1 1 1 1	

DENON AVR-3803 RC CODE

FORMAT SHARP

DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED,1=INVERTED

SYSTEM ADDRESS(C1~C5) : 0 0 1 1 0 , EXTENSION BIT (C12,C13) : 0 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
0	0 0 0 0 0 0	ALL BASS DOWN	16	0 0 0 0 1 0	ZONE2 CD
1	1 0 0 0 0 0	DTS SURROUND	17	1 0 0 0 1 0	ZONE2 TUNER
2	0 1 0 0 0 0	SURROUND BACK ON/OFF	18	0 1 0 0 1 0	ZONE2 VDP
3	1 1 0 0 0 0	MASTER VOL. PRESET1(0dB)	19	1 1 0 0 1 0	ZONE2 V.AUX
4	0 0 1 0 0 0		20	0 0 1 0 1 0	ZONE2 VCR-1
5	1 0 1 0 0 0	MASTER VOL. PRESET2(-20dB)	21	1 0 1 0 1 0	ZONE2 TAPE-2
6	0 1 1 0 0 0	MASTER VOL. PRESET3(-40dB)	22	0 1 1 0 1 0	MULTI PRESET UP
7	1 1 1 0 0 0	ZONE2 VOL. PRESET1(0dB)	23	1 1 1 0 1 0	MULTI PRESET DOWN
8	0 0 0 1 0 0	ZONE2 VOL. PRESET2(-20dB)	24	0 0 0 1 1 0	
9	1 0 0 1 0 0	ZONE2 VOL. PRESET3(-40dB)	25	1 0 0 1 1 0	ZONE2 VCR-2
10	0 1 0 1 0 0	ZONE2 DBS	26	0 1 0 1 1 0	ZONE2 VCR-3
11	1 1 0 1 0 0	HOME THX CINEMA	27	1 1 0 1 1 0	ZONE2 TV
12	0 0 1 1 0 0		28	0 0 1 1 1 0	ZONE2 CDR/TAPE
13	1 0 1 1 0 0	ZONE2 VOLUME UP	29	1 0 1 1 1 0	STEREO
14	0 1 1 1 0 0	ZONE2 VOLUME DOWN	30	0 1 1 1 1 0	DIRECT
15	1 1 1 1 0 0	ZONE2 PHONO	31	1 1 1 1 1 0	

SYSTEM ADDRESS(C1~C5) : 0 0 1 1 0 , EXTENSION BIT (C12,C13) : 0 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
32	0 0 0 0 0 1	SYSTEM SET UP	48	0 0 0 0 1 1	CH VOLUME UP
33	1 0 0 0 0 1	SURROUND PARAMETER	49	1 0 0 0 1 1	CH VOLUME DOWN
34	0 1 0 0 0 1		50	0 1 0 0 1 1	
35	1 1 0 0 0 1	CURSOR UP	51	1 1 0 0 1 1	
36	0 0 1 0 0 1	CURSOR DOWN	52	0 0 1 0 1 1	
37	1 0 1 0 0 1		53	1 0 1 0 1 1	INPUT MODE EXT.IN
38	0 1 1 0 0 1		54	0 1 1 0 1 1	INPUT MODE
39	1 1 1 0 0 1		55	1 1 1 0 1 1	ALL TREBLE UP
40	0 0 0 1 0 1	5CH/7CH STEREO	56	0 0 0 1 1 1	ALL TREBLE DOWN
41	1 0 0 1 0 1	2CH PLAY(INPUT CH)	57	1 0 0 1 1 1	TUNER SHIFT A
42	0 1 0 1 0 1	MULTI CH PLAY (INPUT CH)	58	0 1 0 1 1 1	TUNER SHIFT B
43	1 1 0 1 0 1		59	1 1 0 1 1 1	TUNER SHIFT C
44	0 0 1 1 0 1	AUDIO FUNCTION	60	0 0 1 1 1 1	TUNER SHIFT D
45	1 0 1 1 0 1	VIDEO FUNCTION	61	1 0 1 1 1 1	TUNER SHIFT E
46	0 1 1 1 0 1		62	0 1 1 1 1 1	ZONE2 DVD
47	1 1 1 1 0 1	CH SELECT	63	1 1 1 1 1 1	ALL BASS DOWN

DENON AVR-3803 RC CODE

FORMAT SHARP

DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED,1=INVERTED

SYSTEM ADDRESS(C1~C5) : 0 0 1 1 0 , EXTENSION BIT (C12,C13) : 1 0

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
32	0 0 0 0 0 1		48	0 0 0 0 1 1	
33	1 0 0 0 0 1		49	1 0 0 0 1 1	
34	0 1 0 0 0 1		50	0 1 0 0 1 1	
35	1 1 0 0 0 1		51	1 1 0 0 1 1	
36	0 0 1 0 0 1		52	0 0 1 0 1 1	
37	1 0 1 0 0 1		53	1 0 1 0 1 1	
38	0 1 1 0 0 1		54	0 1 1 0 1 1	
39	1 1 1 0 0 1		55	1 1 1 0 1 1	
40	0 0 0 1 0 1		56	0 0 0 1 1 1	
41	1 0 0 1 0 1		57	1 0 0 1 1 1	
42	0 1 0 1 0 1		58	0 1 0 1 1 1	
43	1 1 0 1 0 1		59	1 1 0 1 1 1	
44	0 0 1 1 0 1		60	0 0 1 1 1 1	
45	1 0 1 1 0 1		61	1 0 1 1 1 1	
46	0 1 1 1 0 1		62	0 1 1 1 1 1	
47	1 1 1 1 0 1		63	1 1 1 1 1 1	CURSOR LEFT

SYSTEM ADDRESS(C1~C5) : 0 0 1 1 0 , EXTENSION BIT (C12,C13) : 1 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
0	0 0 0 0 0 0		16	0 0 0 0 1 0	
1	1 0 0 0 0 0	TUNER PRESET CH 1	17	1 0 0 0 1 0	
2	0 1 0 0 0 0	TUNER PRESET CH 2	18	0 1 0 0 1 0	
3	1 1 0 0 0 0	TUNER PRESET CH 3	19	1 1 0 0 1 0	
4	0 0 1 0 0 0	TUNER PRESET CH 4	20	0 0 1 0 1 0	
5	1 0 1 0 0 0	TUNER PRESET CH 5	21	1 0 1 0 1 0	TUNER PRESET DOWN
6	0 1 1 0 0 0	TUNER PRESET CH 6	22	0 1 1 0 1 0	TUNER PRESET UP
7	1 1 1 0 0 0	TUNER PRESET CH 7	23	1 1 1 0 1 0	TUNER BAND
8	0 0 0 1 0 0	TUNER PRESET CH 8	24	0 0 0 1 1 0	TUNING MODE(AUTOMANUAL)
9	1 0 0 1 0 0		25	1 0 0 1 1 0	TUNER TUNING UP
10	0 1 0 1 0 0		26	0 1 0 1 1 0	TUNER TUNING DOWN
11	1 1 0 1 0 0		27	1 1 0 1 1 0	
12	0 0 1 1 0 0	TUNER MEMORY	28	0 0 1 1 1 0	
13	1 0 1 1 0 0	TUNER SHIFT	29	1 0 1 1 1 0	
14	0 1 1 1 0 0		30	0 1 1 1 1 0	
15	1 1 1 1 0 0		31	1 1 1 1 1 0	DIMMER

DENON AVR-3803 RC CODE

FORMAT SHARP

DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED,1=INVERTED

SYSTEM ADDRESS (C1~C5) : 0 1 0 0 0 , EXTENSION BIT (C12,C13) : 1 0

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
0	0 0 0 0 0 0		16	0 0 0 0 1 0	
1	1 0 0 0 0 0		17	1 0 0 0 1 0	
2	0 1 0 0 0 0		18	0 1 0 0 1 0	ZONE1 TV
3	1 1 0 0 0 0		19	1 1 0 0 1 0	ZONE1 DBS/SAT
4	0 0 1 0 0 0		20	0 0 1 0 1 0	ZONE1 VCR-1
5	1 0 1 0 0 0		21	1 0 1 0 1 0	ZONE1 VCR-2
6	0 1 1 0 0 0		22	0 1 1 0 1 0	ZONE1 VCR-3
7	1 1 1 0 0 0		23	1 1 1 0 1 0	ZONE1 V.AUX
8	0 0 0 1 0 0	ZONE1 TUNER	24	0 0 0 1 1 0	-
9	1 0 0 1 0 0	ZONE1 PHONO	25	1 0 0 1 1 0	
10	0 1 0 1 0 0	ZONE1 CD	26	0 1 0 1 1 0	
11	1 1 0 1 0 0		27	1 1 0 1 1 0	ZONE1 TAPE-1
12	0 0 1 1 0 0		28	0 0 1 1 1 0	ZONE1 TAPE-2
13	1 0 1 1 0 0		29	1 0 1 1 1 0	MULTI ON/OFF
14	0 1 1 1 0 0	ZONE1 DVD	30	0 1 1 1 1 0	
15	1 1 1 1 0 0	ZONE1 VDP	31	1 1 1 1 1 0	

SYSTEM ADDRESS (C1~C5) : 0 1 0 0 0 , EXTENSION BIT (C12,C13) : 1 0

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
32	0 0 0 0 0 1		48	0 0 0 0 1 1	
33	1 0 0 0 0 1		49	1 0 0 0 1 1	
34	0 1 0 0 0 1		50	0 1 0 0 1 1	
35	1 1 0 0 0 1		51	1 1 0 0 1 1	
36	0 0 1 0 0 1		52	0 0 1 0 1 1	
37	1 0 1 0 0 1		53	1 0 1 0 1 1	
38	0 1 1 0 0 1		54	0 1 1 0 1 1	
39	1 1 1 0 0 1		55	1 1 1 0 1 1	
40	0 0 0 1 0 1		56	0 0 0 1 1 1	
41	1 0 0 1 0 1		57	1 0 0 1 1 1	MAIN ZONE ON
42	0 1 0 1 0 1	PURE DIRECT	58	0 1 0 1 1 1	MAIN ZONE OFF
43	1 1 0 1 0 1		59	1 1 0 1 1 1	MULTI ZONE2 ON
44	0 0 1 1 0 1		60	0 0 1 1 1 1	MULTI ZONE2 OFF
45	1 0 1 1 0 1		61	1 0 1 1 1 1	
46	0 1 1 1 0 1		62	0 1 1 1 1 1	
47	1 1 1 1 0 1		63	1 1 1 1 1 1	

DENON AVR-3803 RC CODE

FORMAT SHARP

DATA CONSTRUCTION 15bits C14 0 C15 0=NOT INVERTED,1=INVERTED

SYSTEM ADDRESS (C1~C5) : 0 0 1 0 0 , EXTENSION BIT (C12,C13) : 0 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
0	0 0 0 0 0 0		16	0 0 0 0 1 0	DOLBY PL II MUSIC
1	1 0 0 0 0 0	WIDE SCREEN	17	1 0 0 0 1 0	DOLBY PL
2	0 1 0 0 0 0	SUPER STADIUM	18	0 1 0 0 1 0	
3	1 1 0 0 0 0	ROCK ARENA	19	1 1 0 0 1 0	DTS ES MATRIX
4	0 0 1 0 0 0	JAZZ CLUB	20	0 0 1 0 1 0	DOLBY DIGITAL EX
5	1 0 1 0 0 0	CLASSIC CONCERT	21	1 0 1 0 1 0	CINEMA MODE
6	0 1 1 0 0 0	MONO MOVIE	22	0 1 1 0 1 0	MUSIC MODE
7	1 1 1 0 0 0	MATRIX	23	1 1 1 0 1 0	
8	0 0 0 1 0 0	VIDEO GAME	24	0 0 0 1 1 0	
9	1 0 0 1 0 0	VIRTUAL	25	1 0 0 1 1 0	
10	0 1 0 1 0 0	THX ULTRA2 CINEMA	26	0 1 0 1 1 0	
11	1 1 0 1 0 0	THX MUSIC MODE	27	1 1 0 1 1 0	
12	0 0 1 1 0 0	THX SURROUND EX	28	0 0 1 1 1 0	
13	1 0 1 1 0 0	DTS NEO:6 CINEMA	29	1 0 1 1 1 0	
14	0 1 1 1 0 0	DTS NEO:6 MUSIC	30	0 1 1 1 1 0	
15	1 1 1 1 0 0	DOLBY PL II CINEMA	31	1 1 1 1 1 0	

SYSTEM ADDRESS (C1~C5) : 0 0 1 0 0 , EXTENSION BIT (C12,C13) : 0 1

No.	Data (C6~C11)	Key Name	No.	Data (C6~C11)	Key Name
32	0 0 0 0 0 1		48	0 0 0 0 1 1	
33	1 0 0 0 0 1		49	1 0 0 0 1 1	
34	0 1 0 0 0 1		50	0 1 0 0 1 1	
35	1 1 0 0 0 1		51	1 1 0 0 1 1	INPUT MODE AUTO
36	0 0 1 0 0 1		52	0 0 1 0 1 1	INPUT MODE PCM
37	1 0 1 0 0 1		53	1 0 1 0 1 1	INPUT MODE DTS
38	0 1 1 0 0 1		54	0 1 1 0 1 1	INPUT MODE RF
39	1 1 1 0 0 1		55	1 1 1 0 1 1	INPUT MODE EXT.IN
40	0 0 0 1 0 1		56	0 0 0 1 1 1	INPUT MODE EXT.IN2
41	1 0 0 1 0 1		57	1 0 0 1 1 1	
42	0 1 0 1 0 1		58	0 1 0 1 1 1	
43	1 1 0 1 0 1		59	1 1 0 1 1 1	
44	0 0 1 1 0 1		60	0 0 1 1 1 1	
45	1 0 1 1 0 1		61	1 0 1 1 1 1	
46	0 1 1 1 0 1		62	0 1 1 1 1 1	
47	1 1 1 1 0 1		63	1 1 1 1 1 1	