

# DENON®

## D-T1

CD RECEIVER SYSTEM

# Quick Start Guide

Kurzanleitung / Guide de démarrage rapide / Guida di Avvio Rapido /  
Guía de inicio rápido / Snelhandleiding / Snabbstartsguide /  
Краткое руководство пользователя / Skrócona instrukcja obsługi

## Read Me First....

Bitte zuerst lesen... / Lisez-moi en premier... / Nota preliminare... /  
Lea esto primero... / Lees mij eerst... / Läs detta först... /  
Прочитайте в первую очередь... / Przeczytaj to najpierw....

ENGLISH

DEUTSCH

FRANÇAIS

ITALIANO

ESPAÑOL

NEDERLANDS

SVENSKA

РУССКИЙ

POLSKI

# Welcome

Thank you for choosing a Denon CD receiver system. This guide provides step-by-step instructions for setting up your CD receiver system.

**Please do not return this unit to the store – call for assistance.**

**If you need help... :**






 

 
 
 


If you need additional help in solving problems, contact Denon customer service in your area.

For details, see the Denon homepage.

[www.denon.com](http://www.denon.com)

# Before You Begin

## What's In the Box


Quick Start Guide		FM indoor antenna	
Safety Instructions		AM loop antenna	
Cautions on Using Batteries		Remote control unit (RC-1229)	
Notes on radio		LR03/AAA batteries	
CD receiver		Speaker systems	
Power cord		Speaker cables	



- These drawings are for illustrative purposes only and may not represent the actual product(s).

# 1 Connection


- 1 Connect the left and right speakers to the D-T1.

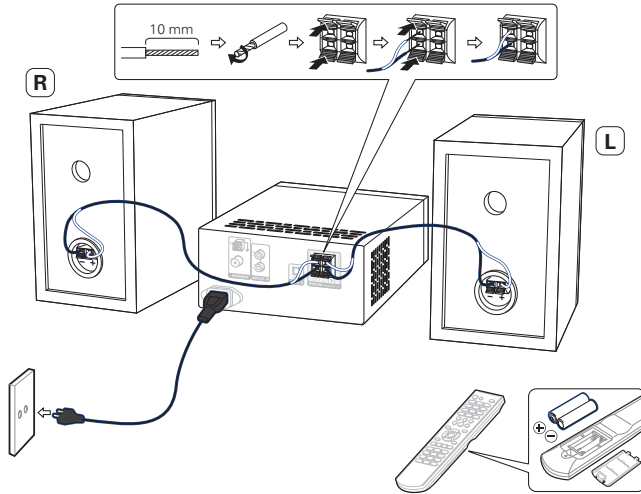

- 2 Connect the power cord from the D-T1 to a power outlet.

- 3 Insert the batteries into the remote.



## Connecting a FM/AM antenna

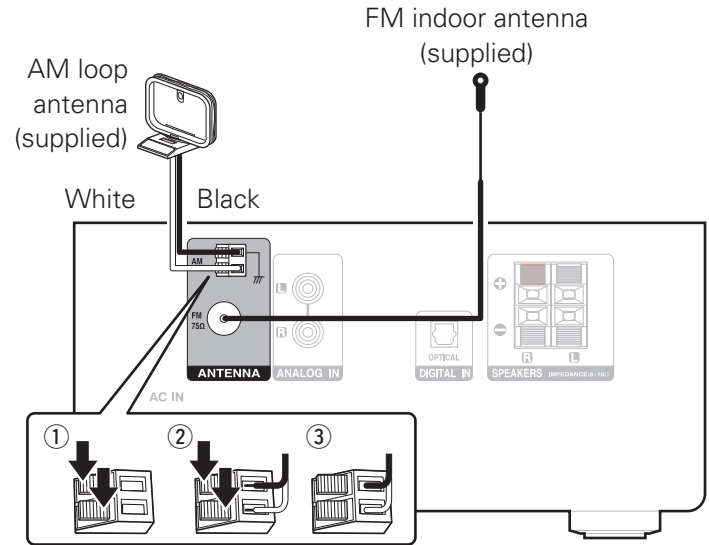

- See "AM loop antenna assembly" on the next page for instructions on how to assemble the AM loop antenna.

## ❑ AM loop antenna assembly

- 1 Put the stand section through the bottom of the loop antenna from the rear and bend it forward.
- 2 Insert the projecting part into the square hole in the stand.

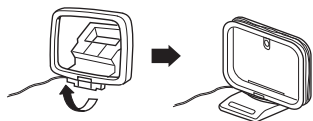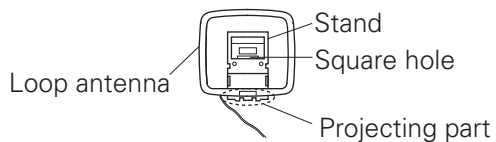

## 2 Enjoying your music!

### ❑ Play a CD

- 1 Press **CD** to switch the input source to “CD”.
- 2 Insert a disc.
- 3 Press **▶/||**.  
Playback starts.

## ❑ Listening to FM/AM broadcasts

- 1 Use **FM** or **AM** to select the reception band.
- 2 Use **TUNE +** or **TUNE -** to select the station you want listen to.



- Pressing **MODE** while an FM signal is being transmitted changes the FM reception mode between **STEREO** and **MONO** reception modes. Set to mono reception mode if the signal is too weak for stable stereo reception. Factory default is “**STEREO**”.

## ❑ Listening to preset FM/AM stations

This unit can be preset with a total of 40 broadcast stations. (FM: 30 stations, AM: 10 stations)

- 1 **Tune in the station you want to preset.**
- 2 **Press ENTER.**  
The preset number flashes.
- 3 **Use 0 – 9, +10 or PRESET +, – to select the number to be preset, then press ENTER.**  
The reception frequency and reception mode are preset.

## ❑ Enjoying music using Bluetooth

1


**Press Bluetooth to switch the input source to “BT AUDIO”.**

When using for the first time, the unit will go into the pairing mode automatically and “PAIRING” will appear on the display of the unit.



2


**Activate the Bluetooth settings on your mobile device.**

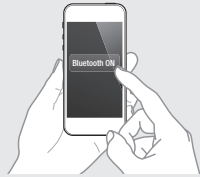

3


**Select “Denon D-T1” from the Bluetooth device list on your mobile device.**

- Enter “0000” when the password is requested on the screen of the Bluetooth device.

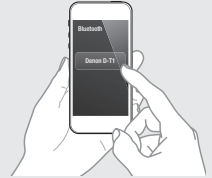

4


**Play music using any app on your device.**

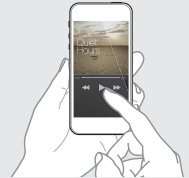


To reconnect a previously paired Bluetooth device, Start at step 2.

# Owner's Manual

- For more information, visit [www.denon.com](http://www.denon.com)
- Refer to the Online Manual for other functions information and operation procedure details. [manuals.denon.com/DT1/EU/EN/](http://manuals.denon.com/DT1/EU/EN/)

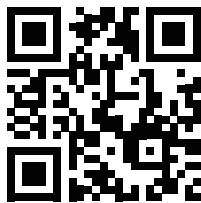

## Online Manual

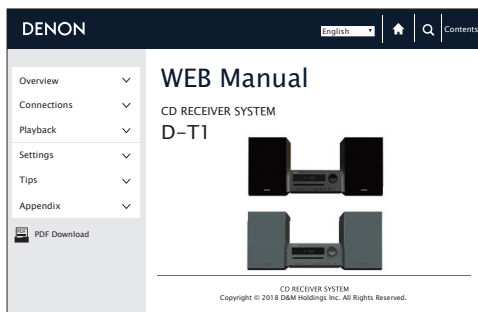

**DENON®**

[www.denon.com](http://www.denon.com)

Printed in China 5411 11701 00AD  
Copyright © 2018 D&M Holdings Inc. All Rights Reserved.