


DENON[®]

AH-GC30

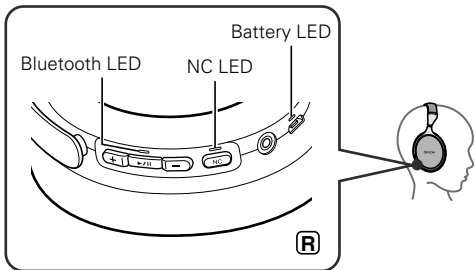


1. Charging

Charge this unit using the included USB cable before using.

The battery LED indicates the battery charge status.

- Charging: Lights red
- Charging completed: Lights green

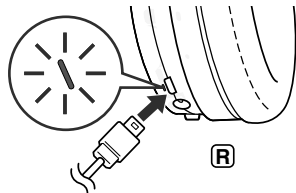

It will take approx. 2 hours from empty to full charge. This unit can be used for approximately 20 hours when the battery is fully charged.

When the rechargeable battery is low, a notification sounds and the battery LED blinks in red at approx. 3 second intervals.

Charge this unit using the supplied USB cable.



- Press and hold the ►/|| button for 3 seconds or more to turn the Bluetooth function off or the NC button for 2 seconds or more to turn the noise cancel function off after use and preserve the battery.

2. Pairing with Bluetooth device

Pair this unit with the Bluetooth device you want to connect.

1. Activate Bluetooth function of the Bluetooth device to be connected.
2. With the power off, press and hold this unit's ►/|| button for 4 seconds or more. After the Bluetooth LED lights, it blinks in approximately 1 second intervals and this unit enters pairing mode.
3. Select the "DENON AH-GC30" appears on the Bluetooth device to be connected. When connected, the Bluetooth LED on this unit lights for approximately 5 seconds.



- If you are requested to enter a PIN code (pass key), enter "0000" (four zeros).

3. Playback music

Playback operations can be performed from both the Bluetooth device and this unit. Here we will explain the operations using the control buttons on this unit.

Play/Pause	Press the ►/ button once.	Increase volume	Press the volume "+" button.
Next track	Press the ►/ button twice.	Decrease volume	Press the volume "-" button.
Previous track	Press the ►/ button three times.		

4. Noise Cancelling function

When the NC button is pressed and held for 2 seconds or more, the NC LED blinks and the ambient noise cancel function turns on. Press the NC button to cycle between 3 modes: Airplane / City / Office and choose your preferred setting.

Web Manual

Refer to the web manual for other functions information and operation procedure details, such as remaining battery indication, audio guidance, and so on.

Enter the following URL into your web browser:

manuals.denon.com/AHGC30/ALL/EN/



DENON®

www.denon.com

Printed in China 5411 11713 10AD
Copyright © 2019 D&M Holdings Inc. All Rights Reserved.