DENON®

# Quick Setup Guide

Network Receiver

DRA-100

**Start Here**
**Starten Sie hier**
**Commencez ici**
**Iniziare qui**
**Iniciar aquí**
**Begin hier**
**Starta här**
**Начните здесь**
**Zacznij tutaj**

# Before you begin

## What's In The Box

DRA-100

Power cord



Remote and batteries

External antennas for Bluetooth/wireless connectivity

Product manual on CD-ROM

## Required For Setup



Network router



Speakers



Speaker cables

## Optional



iOS device and USB cable

Router with WPS



Network cable

- For more information, visit **www.denon.com**
- Refer to the enclosed CD-ROM manual or Online Manual for other functions information and operation procedure details.
  **manuals.denon.com/DRA100/EU/EN/**

# 1. Connection

**1** Connect the external antennas
(required for both Wi-Fi and Bluetooth)

**2** Connect the left and right speakers

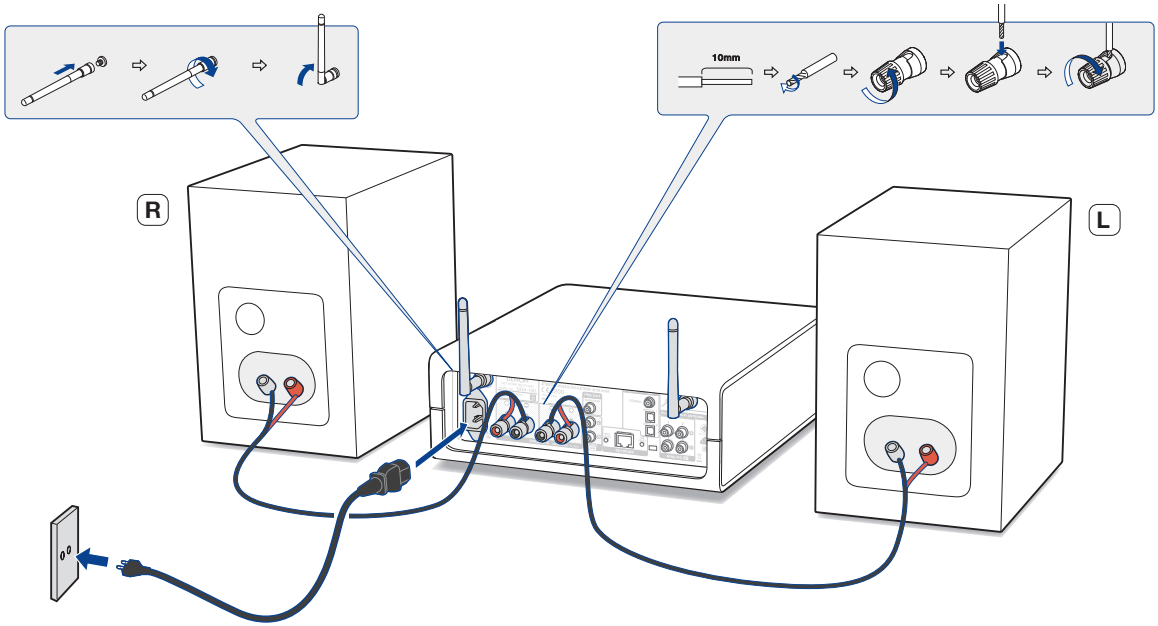


**3** Connect the power cord from the DRA-100
to a power outlet

**4** Insert the batteries
into the remote

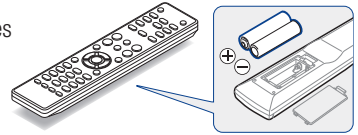

# 2. Connecting to your home network

**Choose from one of the following options**

## Wireless

### iOS device
iOS version 7 or later

### iOS device + USB cable
iOS version 5 or later

### No WPS router

Wi-Fi router

### WPS router

Wi-Fi router

**1** Power on

**2** Select language

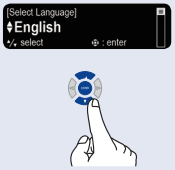


**3** Make sure your iOS device is connected to your WiFi Network. Select the network named “Denon DRA-100” from the Settings/Wi-Fi screen on your device

**3** Make sure your iOS device is connected to your WiFi Network. Connect your iOS device to the front using your USB cable.



**3** Select “Wi-Fi - scan” and wait as your DRA-100 looks for available networks



**3** Press the WPS button on your router

## Wired



**1** Connect a network cable between your DRA-100 and your router
(cable not included)

**2** Power on

**3** Select language

**4** Please wait while your DRA-100 connects to your wired network.

**4** Follow the instructions and tap Next

**5** Please wait as completing the connection can take a few minutes
The front panel of the DRA-100 will show the status of the connection

**4** Press the iOS Button on the back of your DRA-100




**5** This message will appear on your iOS device
Select “Allow”

**4** Select your network name.
If your network name is not listed, select “Rescan”

**5** Enter your network password using the number keys on the remote control






**4** Within 2 minutes, press the WPS button on the back of your DRA-100

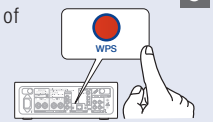


**5** Please wait as completing the connection can take a few minutes
The front panel of the DRA-100 will show the status of the connection




Connected!

## Network Control Setting




Select Network Control ON to control DRA-100 from your smartphone, use Bluetooth/NFC/Apple AirPlay® and maintain constant network access. Power Consumption during standby power will be slightly higher.




Select Network Control OFF to reduce power consumption during standby. You can not turn on your DRA-100 from your smartphone or use Bluetooth/NFC/Apple AirPlay until your DRA-100 is powerd on manually and connects to your network.

# 3. Enjoying your music!

## Enjoying Internet radio

**1** Press the “INTERNET RADIO” button on the remote

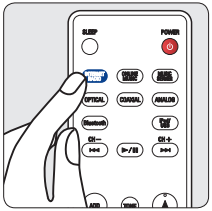

**2** Select a station

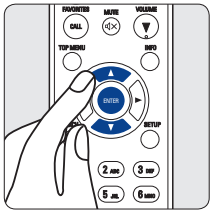

## Enjoying music using Apple AirPlay

**1** Open Control Center (iOS 7 and later) by swiping up from the bottom of your screen, then tap

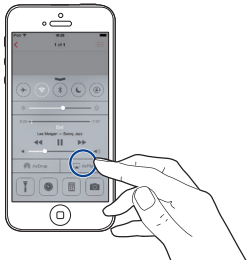

**2** Select the “Denon DRA-100” from the AirPlay Device list and start playing your music

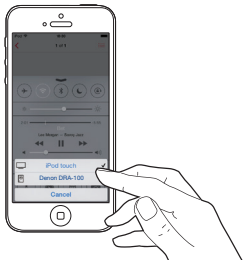


Note: Make sure your iOS device is on the same network as the DRA-100

### Download the Denon “Hi-Fi Remote” app

Scan the QR code to download and install the Denon “Hi-Fi Remote” app using your smartphone and a scanning app or manually search the Apple App store or Google Play store for the “Denon Hi-Fi Remote”

## Enjoying music using Bluetooth

**1** Press the source button to select Bluetooth, then press and hold the Source button until [Pairing Mode] is displayed

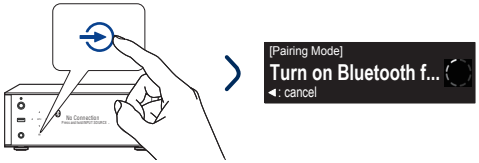


**2** Activate Bluetooth on your mobile device

**3** Select “Denon DRA-100” from the Bluetooth device list on your mobile device

Some devices may required you to verify the numeric code and press ENTER on the DRA-100

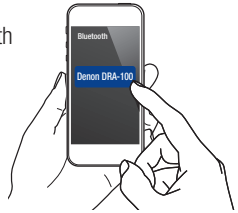


**4** Play music using any app on your device

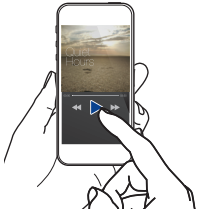

To reconnect a previously paired Bluetooth device, start at step 2.

Pair and connect your NFC capable device by gently touching it on the NFC logo on the front of DRA-100

### Basic trouble shooting

No sound:
- Check all connections.
- Make sure the bare metal wire ends of the speaker wires are in contact with the metal part of the speaker terminals.

### Online Manual

For more information about this product, scan the QR code using your mobile device or visit Denon Support at:
http://manuals.denon.com/DRA100/EU/EN/index.php

DENON

**denon.com**

D&M Holdings Inc,
Printed in China.
5411 11327 00AD