DENON

Getting Started

AVR-1508

TV

DVD Player

2

Speakers

1

A/V Receiver

4

Cable/Satellite

3

NOTES : For more connection. ▶ Manual

• Cables are NOT included.

▶
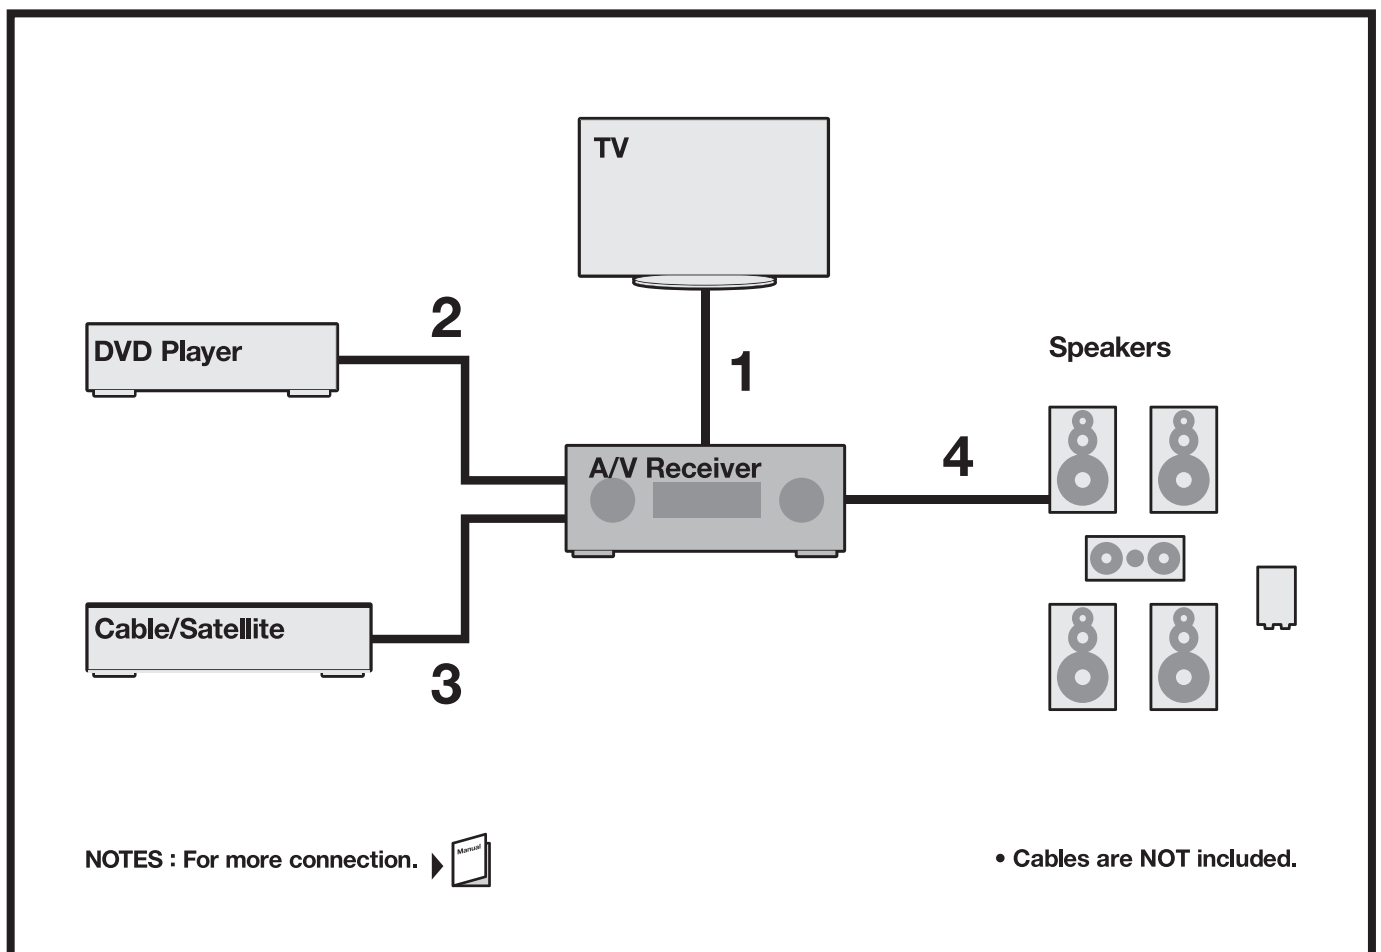
Check & choose your VIDEO connection.

TV — **Check**

DVD Player — **Check**

Cable/Satellite — **Check**

Good
Video or S-Video

Better
Component

Best
HDMI

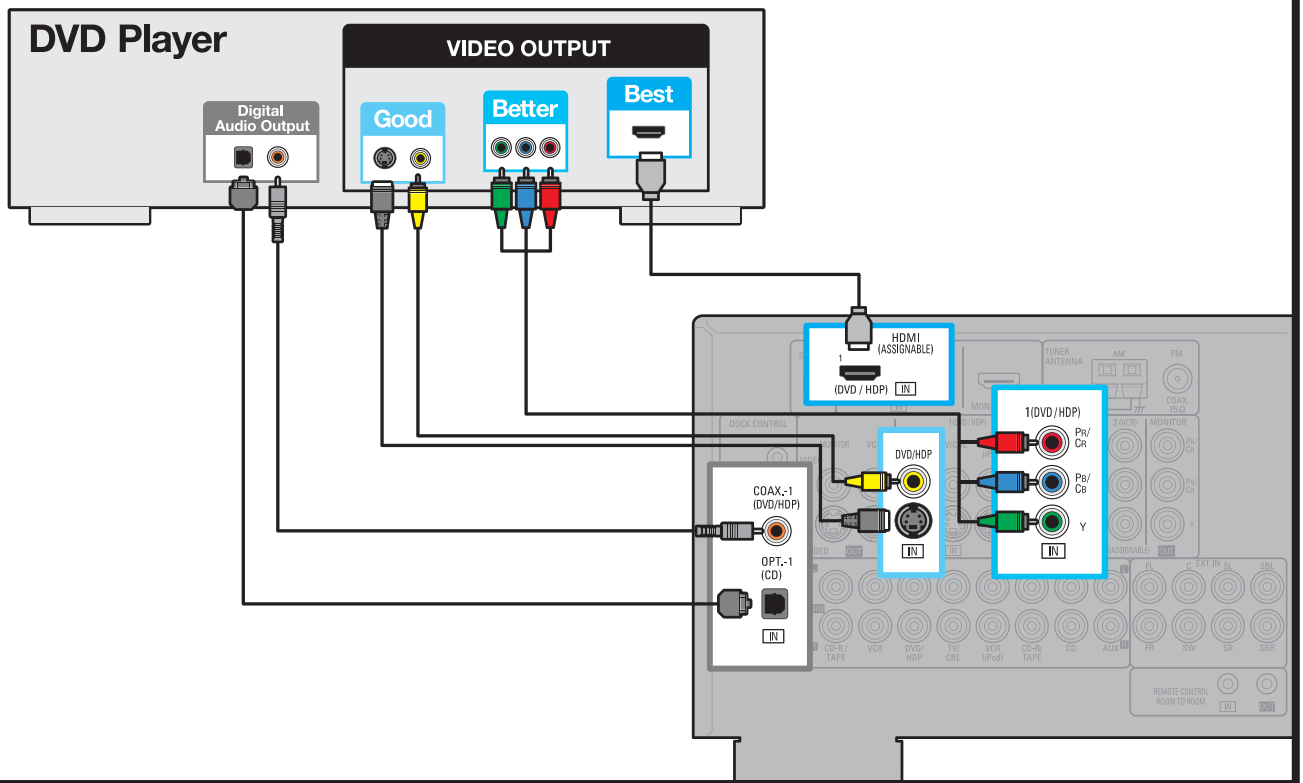**Choose**
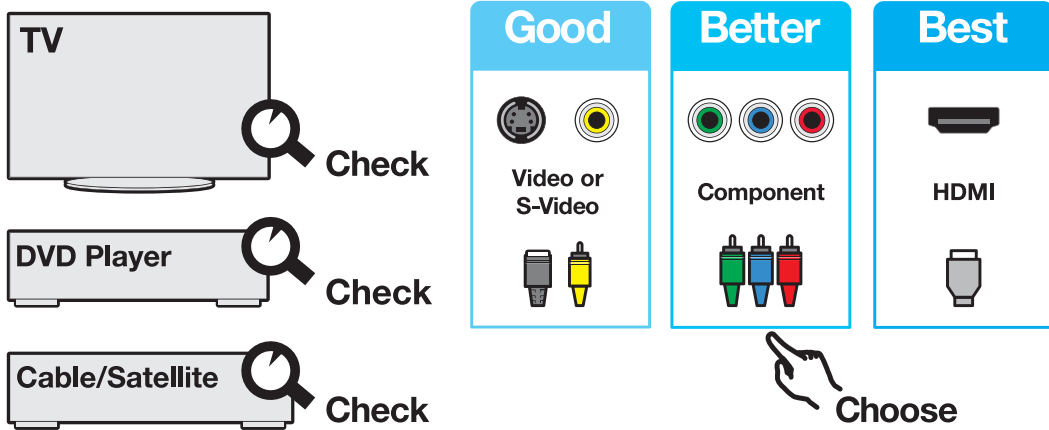
• **Follow 2-3 according to your choice of connection.** (Read Instruction Manual of your TV set.)

1

TV

VIDEO INPUT

Good | Better | Best

HDMI

MONITOR OUT

MONITOR

VIDEO

S-VIDEO OUT

MONITOR

Pr/Cr

Pb/Cb

Y

OUT

SAT TU XM

HDMI (ASSIGNABLE)
1 (DVD / HDP) 2 (TV / CBL)

AM FM

DOCK CONTROL

COAX-(DVD/HD)

COAX-(TV/CB)

OPT-1 (CD)

OPT-2 (VCR)

DIGITAL (ASSIGNABLE)

DVD/HDP TV/CBL VCR (iPod)

CD-R / TAPE VCR DVD/ HDP TV/ CBL VCR (iPod) CD-R/ TAPE CD AUX

FR SW SR SBR SBL

REMOTE CONTROL ROOM TO ROOM IN OUT

2

DVD Player

VIDEO OUTPUT

Digital Audio Output

Good | Better | Best

HDMI (ASSIGNABLE)
1 (DVD / HDP) IN

1 (DVD / HDP)
PR/CR
PB/CB
Y
IN

DVD/HDP
IN

COAX.-1 (DVD/HDP)

OPT.-1 (CD)
IN

3

Cable/Satellite

VIDEO OUTPUT

Digital Audio Output

Good | Better | Best

HDMI (ASSIGNABLE)
2 (TV / CBL) IN

2 (TV / CBL)
PR/CR
PB/CB
Y
IN

TV/CBL
IN

COAX.-2 (TV/CBL)

OPT.-2 (VCR)
IN

4

NOTES : For Surround back/Zone 2 connection. ▶ Manual

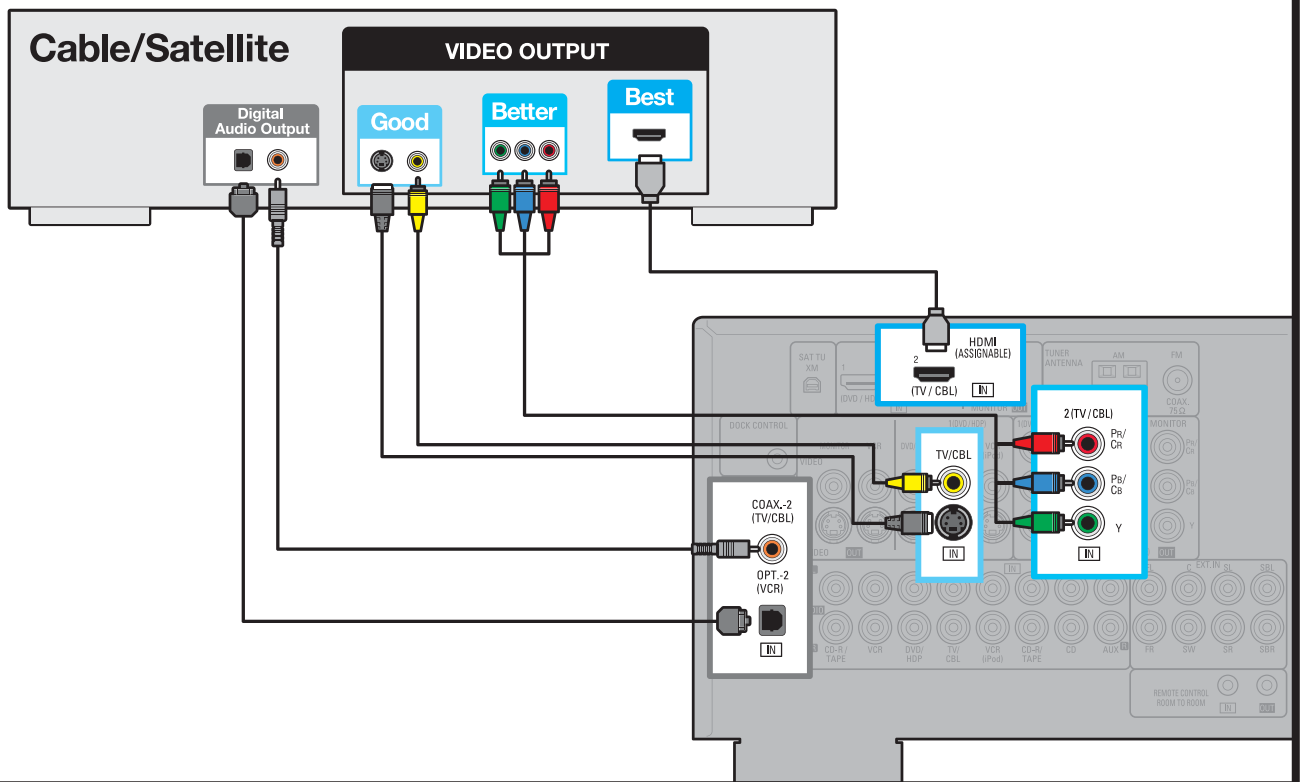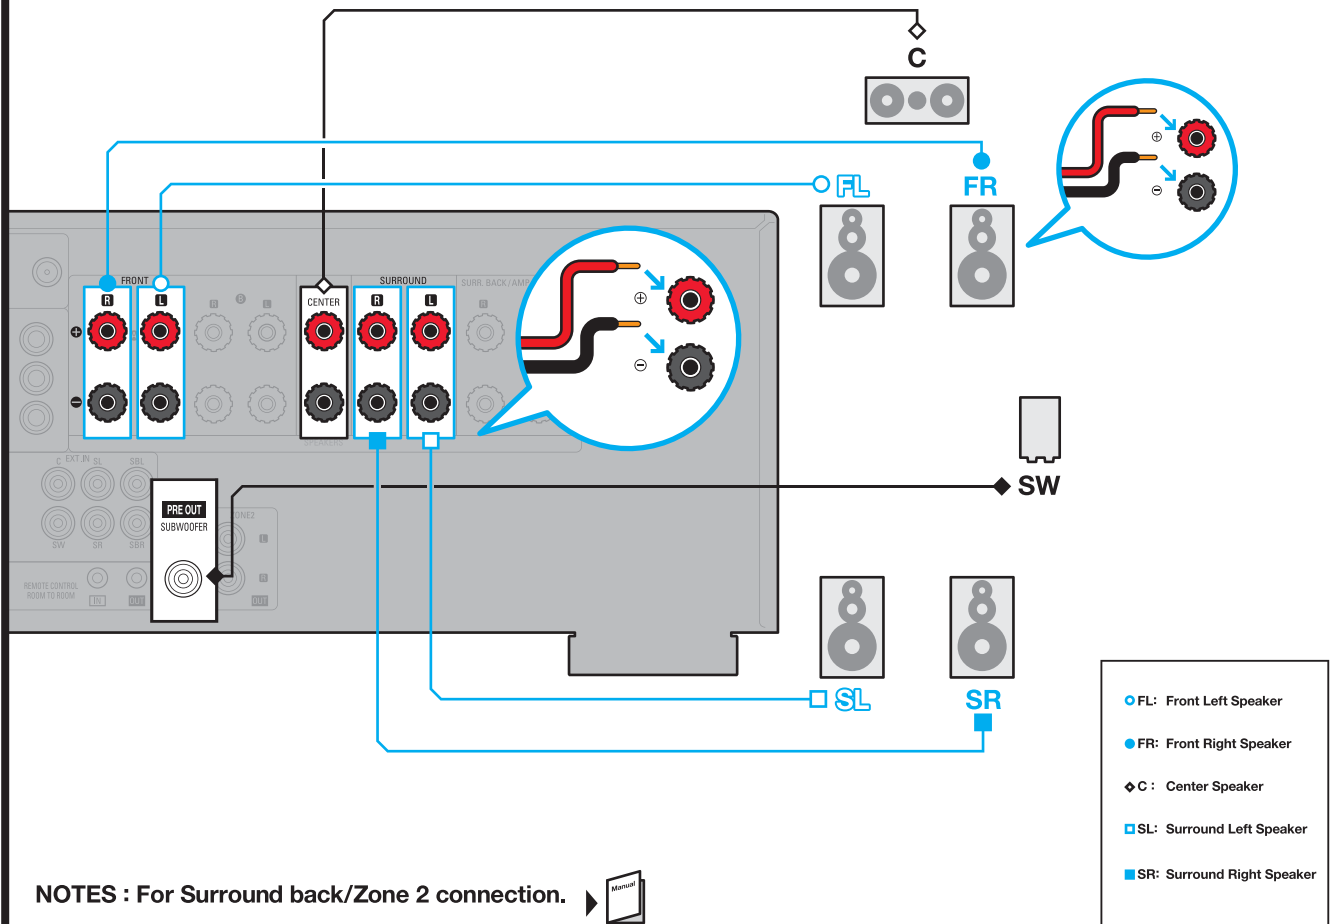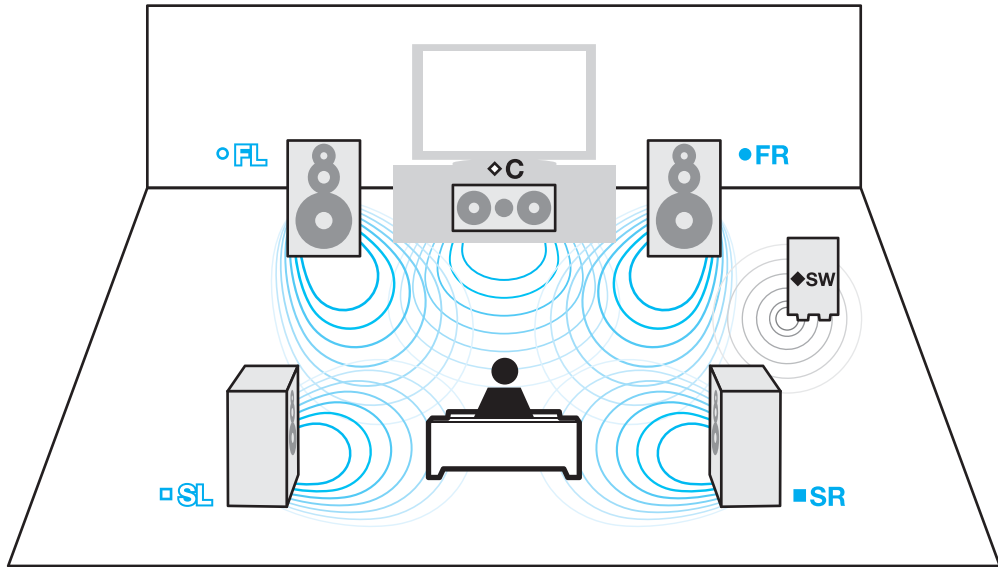|	
○ FL:	Front Left Speaker
● FR:	Front Right Speaker
◇ C :	Center Speaker
▫ SL:	Surround Left Speaker
▪ SR:	Surround Right Speaker

Need more information? ▶ Manual